

# QUICKSTART

## Pekaway Display


### 1 Plug and Play

The Display is immediately ready to use. Simply connect it to the Relayboard.

Via the RJ-45 patch cable the display gets supplied with power and data.




**VAN PI  
Relayboard**

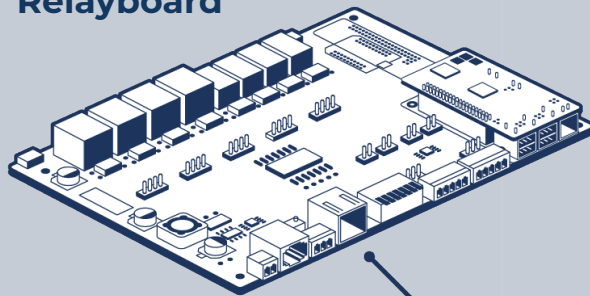

**RJ45**



**VAN PI HAT**

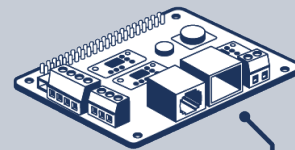


or

If the green point lights up everything is connected correctly.

### 2 User Interface

Once everything is connected the screen automatically starts and you land directly on the overview page of your VAN PI system.

From here you can access your individual categories.

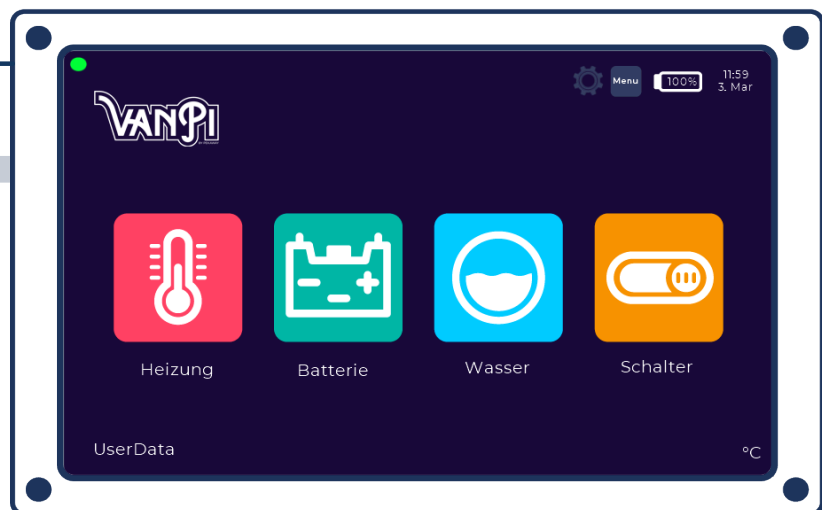

\* A detailed description of the different surfaces can be found in our operating instructions.