


R	21, 3.	5, 4.	6, 7.	8.	21, 11, 9, 10, 22, 24.	12, 26, 28, 27, 25.	13.	31, 51.	23, 29, 30.	32, 33, 35, 34.	36, 78, 42, 77.	38, 37.	39, 40.	41	45, 50, 43, 44, 47, 48, 46.	49, 86, 85, 87, 53, 88, 89, 72, 84.	54, 55, 56, 70, 71, 80, 57, 58, 62, 73, 59, 60, 61, 64, 76, 63, 79, 78, 65, 68, 66, 75, 67, 69.					
C	45, 36, 38, 43, 44, 37.		42, 41, 40.		39,	46, 47, 48, 71.	50, 49, 20.	55, 56, 63, 54.	62, 78, 119, 67, 66, 60, 64, 73, 61, 65, 72, 74.	51, 57,	69, 70,	52, 53, 58, 59.	79,	85, 75, 77, 78, 80, 81, 82, 83, 84.	87, 68.	86, 88, 89, 93.	90, 92, 95, 96, 94.	97, 98,	99,	125, 127, 126, 128.	100, 101, 105.	102, 103, 104, 108, 106, 107, 110.
L	25, 28, 21, 23, 26, 27, 21, 22, 24, 1, 2.	30, 31.	29, 3.	4.	32.	5.	36, 6, 7.	37.	34, 33, 36, 40, 42, 35, 39, 41, 60, 58, 59, 43.	44, 46, 45, 47.	49, 51, 50, 52.	48.	53, 55, 56, 54, 57.									

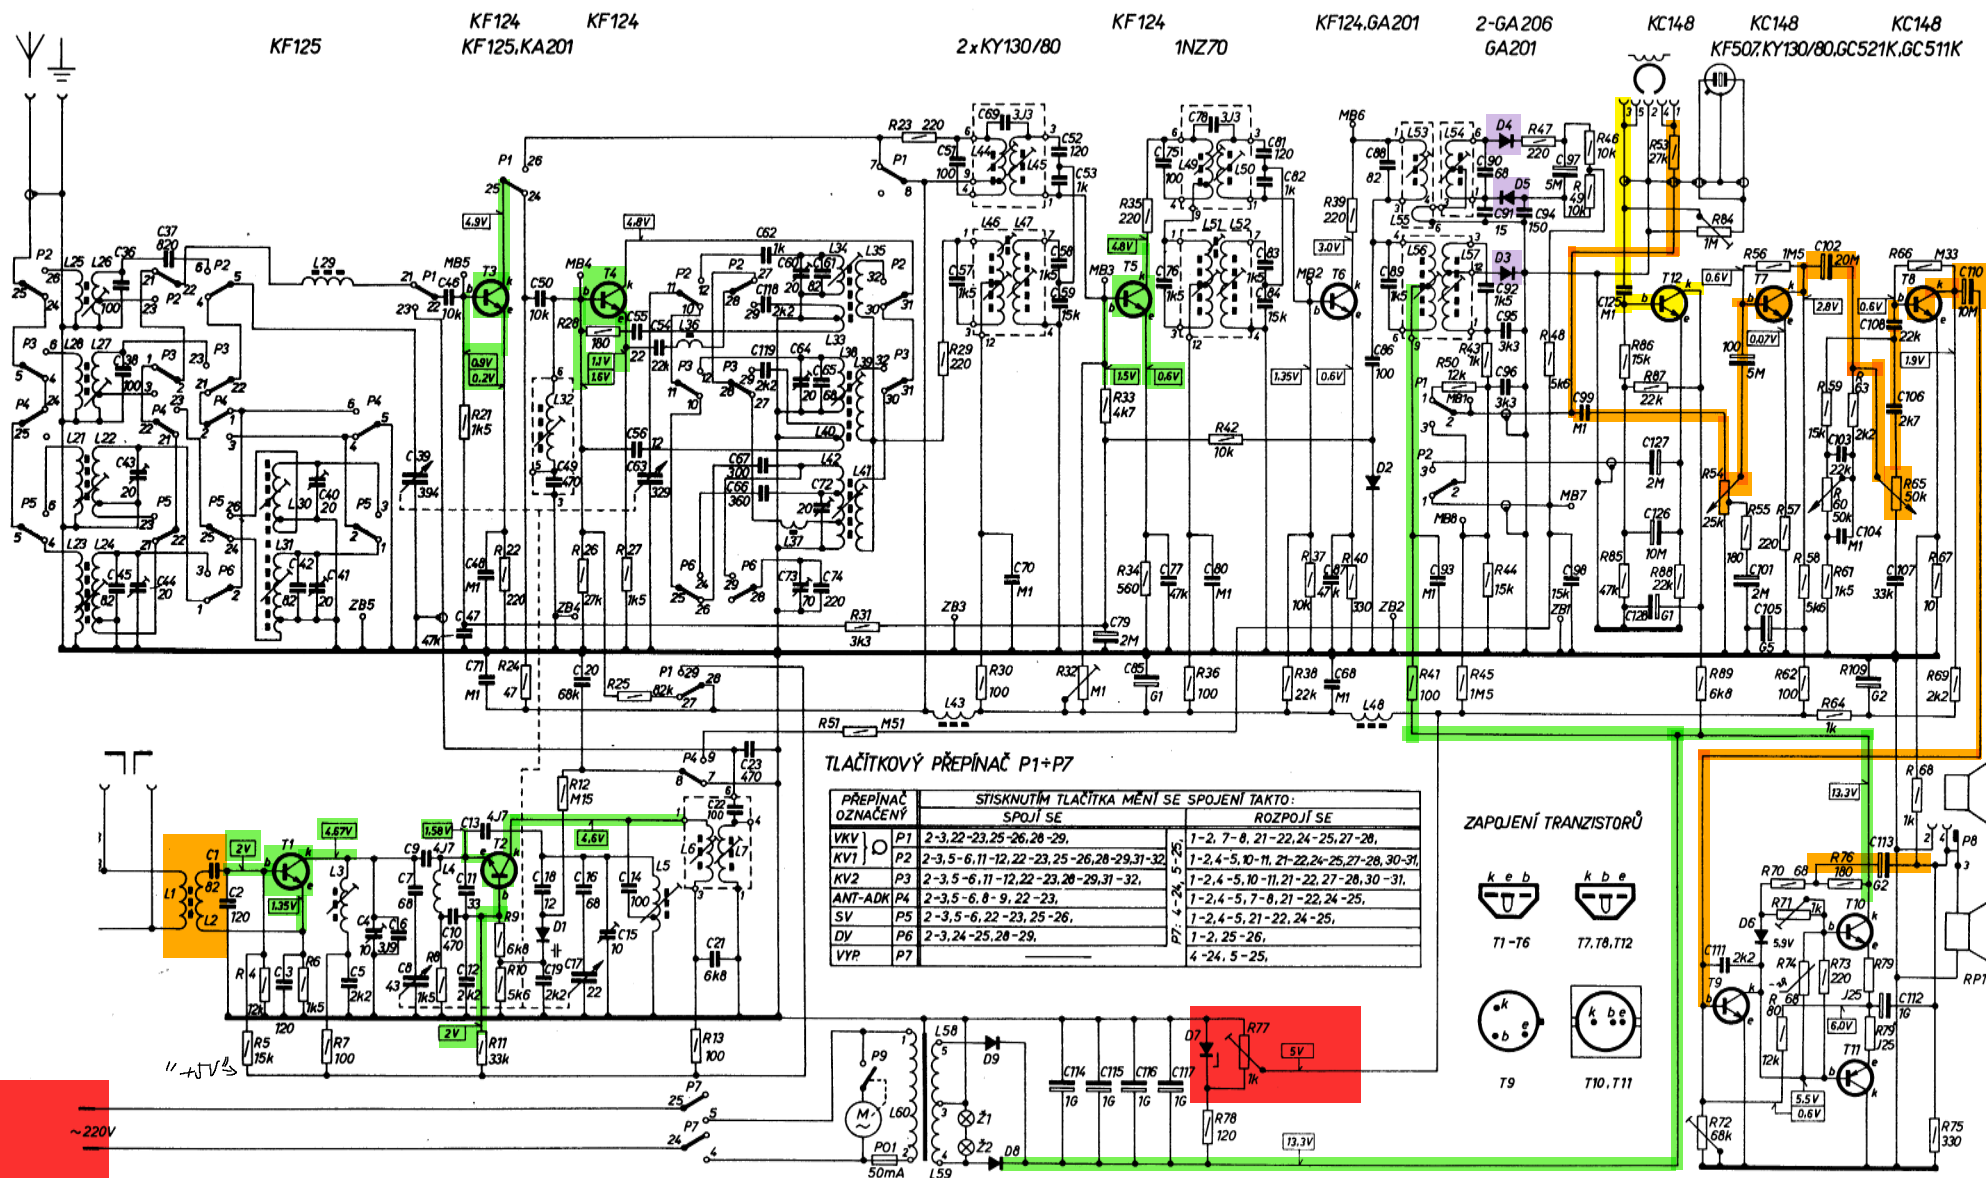

Zapojení gramofonů 1129A „SEXTANT“ a 1130A „GABALERO“