


R	21, 3.	5, 4.	6, 7.	8, 21, 11, 9, 10, 22, 24,	12, 26, 28, 27, 25.	13.	31, 51.	23, 29, 30.	32, 33, 35, 34,	36, 78, 42, 77.	38, 37.	39, 40.	41	45, 50, 43, 44, 47, 48, 46,	49, 86, 85, 87, 53, 88, 89,	72, 84, 54, 55, 56, 70,	71, 80, 57, 58, 62,	73, 59, 60, 61, 64,	76, 63, 79, 78,	65, 68, 66, 75,	67, 69.			
C	45, 36, 38, 43, 44, 37.		42, 41, 40.	39,	46, 47, 48, 71.	50, 49, 20,	55, 56, 63, 54,	62, 78, 119, 67, 66, 60, 64,	73, 61, 65, 72, 74,	51, 57,	69, 70,	52, 53, 58, 59,	79,	85, 75, 77, 78, 80, 81, 82,	83, 84,	87, 68,	86, 88, 89,	93,	90, 92, 95, 96, 94,	97, 98,	99,	125, 127, 126, 128,	100, 101, 105,	102, 103, 104, 108, 106, 107, 110,
L	25, 28, 21, 23, 26, 27, 21, 22, 24, 1, 2.	30, 31,	29, 3.	4,	32,	5,	36, 6, 7,	37,	34, 33, 36, 40, 42, 35, 39, 41, 60, 58, 59, 43,	44, 46, 45, 47,	49, 51, 50, 52,	48,	53, 55, 56, 54, 57,											

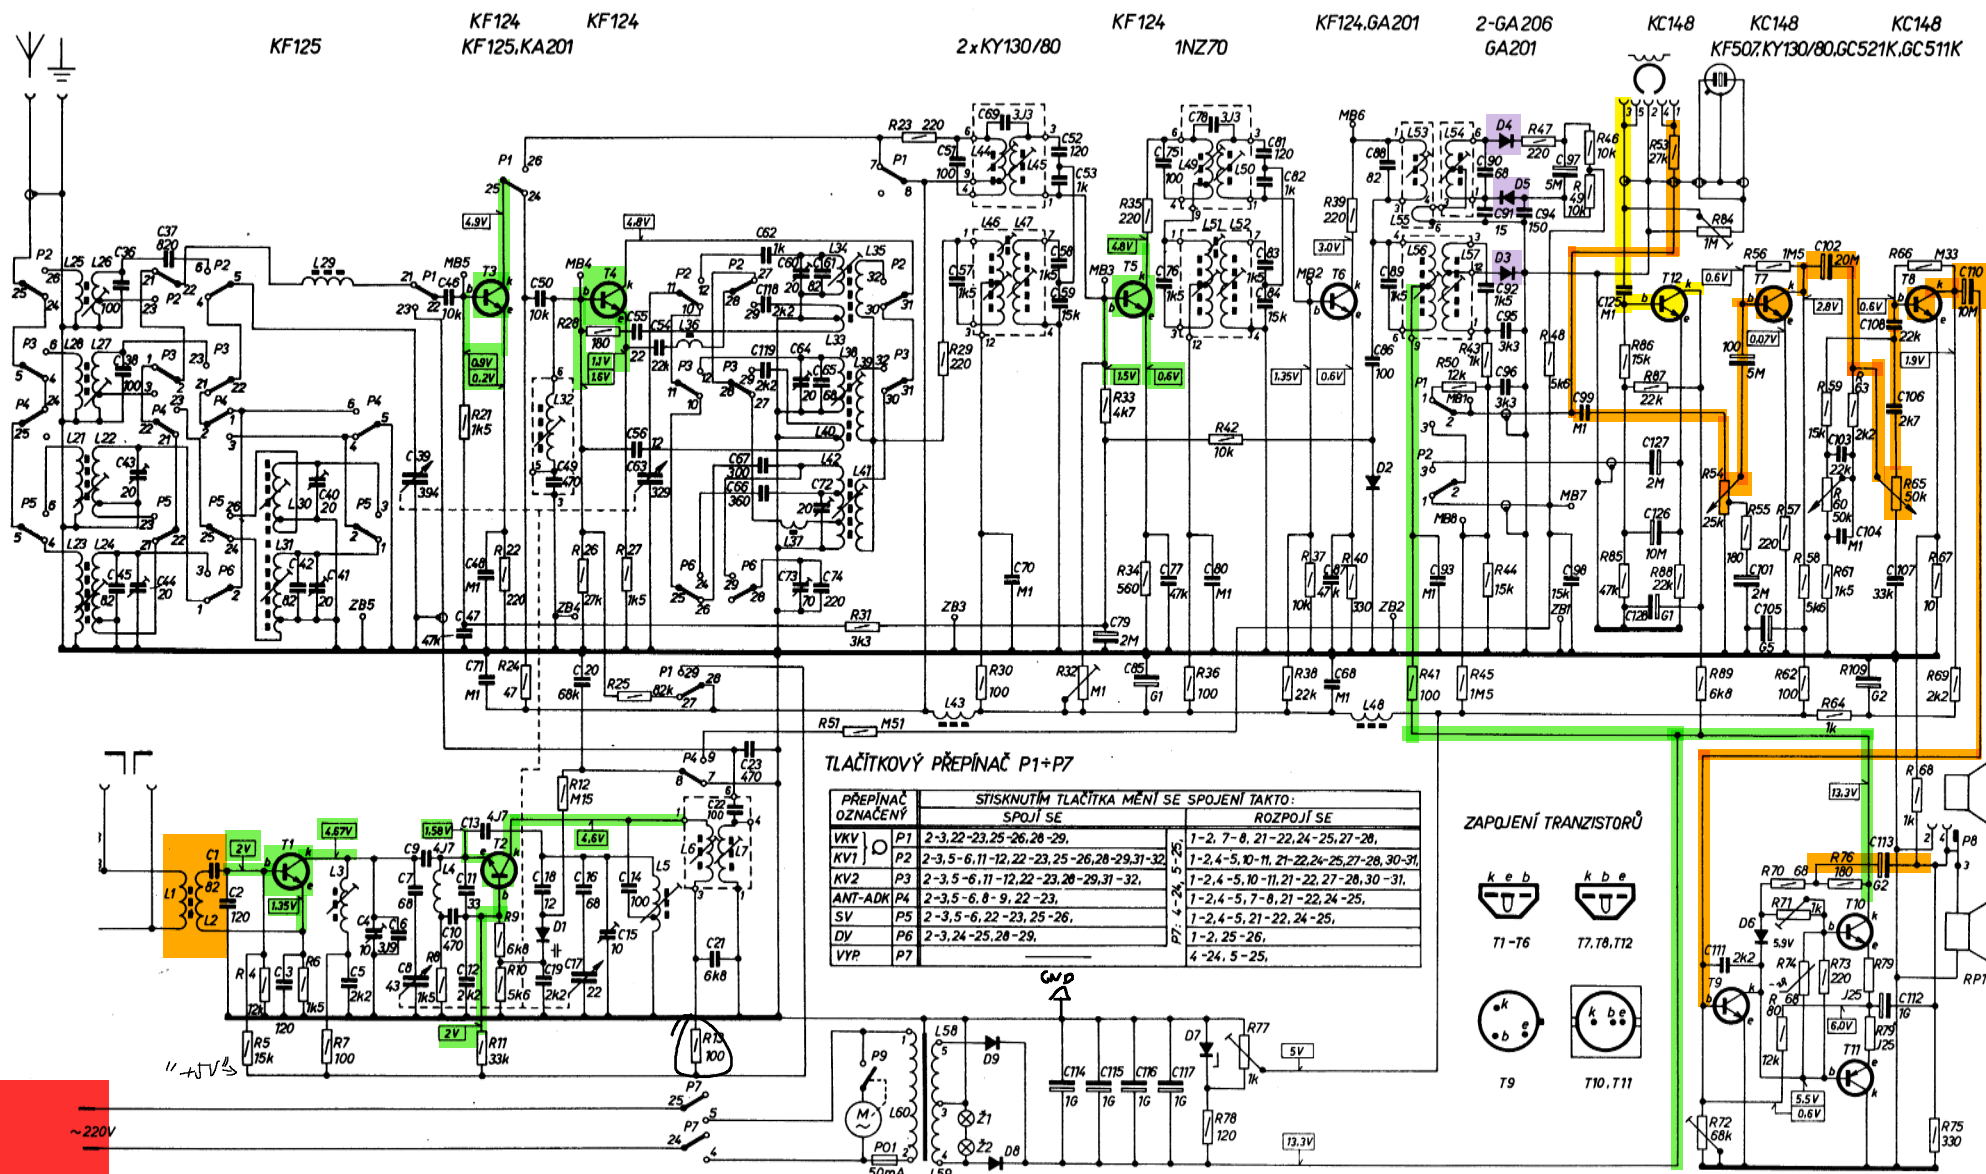

Zapojení gramorádií 1129A „SEXTANT“ a 1130A „GABALERO“