

[EN] Megmeet MC2600 - FW Upgrade/Downgrade - Quick Guide, Rev. 1

1. Introduction

This guide has the purpose to describe the firmware upgrading process of a MC2600 Megmeet controller.

2. Required Info & Prerequisites

- 2.1. **Megmeet MC2600** firmware file.
- 2.1. Megmeet MC2600 bootloader version must be 2.06 or higher.
- 2.2. **Internet Explorer** browser installed on your PC.
- 3.3. Ethernet cable.



3. Firmware Upgrade Workflow

3.1. Login


Login on the Megmeet MC2600 webpage.

Admin: **admin**

Password: **654321**

3.2. Go to System menu

1. Take screen shoots of all Megmeet MC2600's pages.
2. Go to **System** menu.
3. Click on **Go to Firmware Upgrade Mode**
4. "Go to Firmware Upgrade Mode?" -> Click on **OK** button.
5. "Setting Successful" -> Click on **OK** button.
6. Check the Bootloader Version. It must not be lowest than 2.06.
7. Browse the **new firmware** file.
8. Click on **Upgrade** button.
9. "Confirm file?" -> Click on **OK** button.
10. Wait until the following message pop-up window will be displayed.
"Download successfully and the controller will be running."
-> Click on **OK** button.
11. Wait until the following message pop-up window will be displayed.
"Aplication will start..."
-> Click on **OK** button.
12. Refresh the web-page.
13. Check and re-do the MC2600 controller configuration.

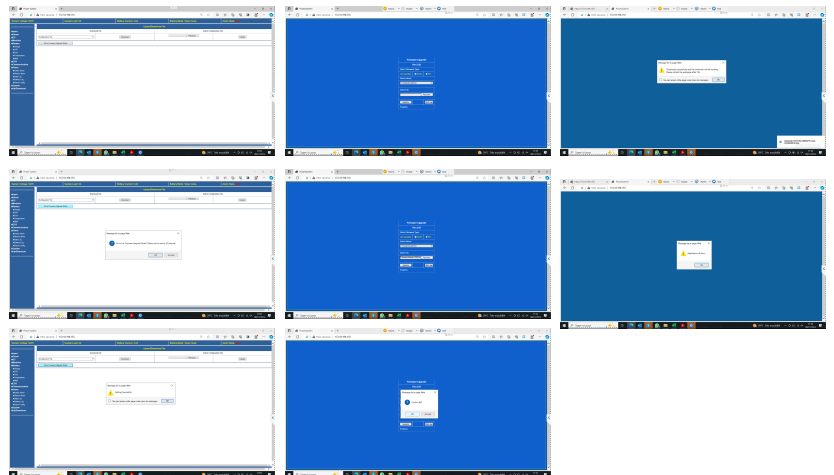

Change log:

Rev. 0 - 08.12.2023 - Initial release.

Rev. 1 - 10.12.2024 - Update section 2.