


First Class Dismantle, cleaning and reassemble.



1.Remove the tap by gripping the bottom cover on the sides and pulling down.




2.The main tap will now pull out from the bottom and slide down.

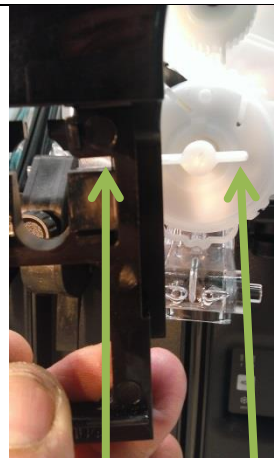

3.Note the slot for the tap piston actuator.




4.Undo the ring nut cover piston by rotating anticlockwise.

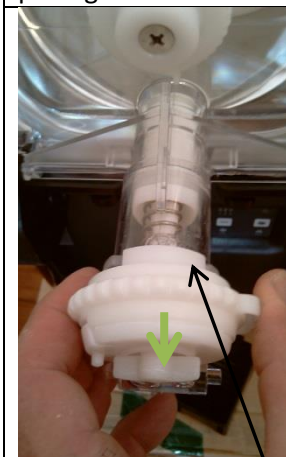

5.Withdraw the entire tap mechanism. Note the position of the tab.



6.Next you can remove the ring nut for the horizontal auger.

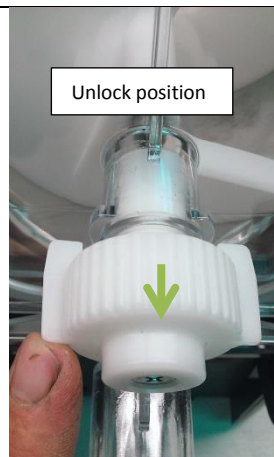

7.Pull out.



8.Next release the bowl clamps.



9.Lift the hook away from the bowl on both sides.



10.Lift the bowl up.



11.Unhook the bowl from the rear hinge.



12.Remove the horizontal auger.




13.You can remove the gear from the horizontal auger for cleaning.



14.Undo the ring nut for the vertical propeller.



15.Now remove the vertical propeller.

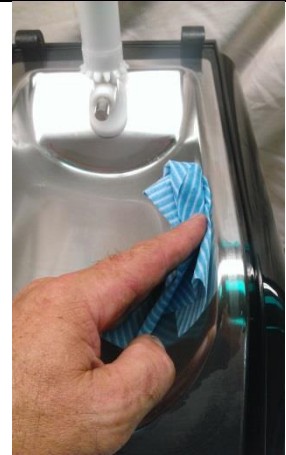

16.Wipe the machine with a wetwipe or damp cloth.



17.You can also clean with Meths and a paper towel to give a hygienic finish.



18.Remove the bowl tube seal for cleaning. Wash all parts in warm soapy water with a soft cloth.



19.It is not essential but you can put a little Vaseline on the auger gears when you refit them.



20.Refit vertical propeller and ring nut




21.Refit the horizontal auger.



22.Smear a lubricant such as Vaseline over the entire surface of the seal. Refit to bowl.

NB: The Vaseline will ensure the bowl seal tubing does not fall out while you refit the bowl. The Vaseline will allow the tubing to slide against the stainless steel of the machine, when refitting the bowl, preventing any pinching or twists and ensuring a good seal.

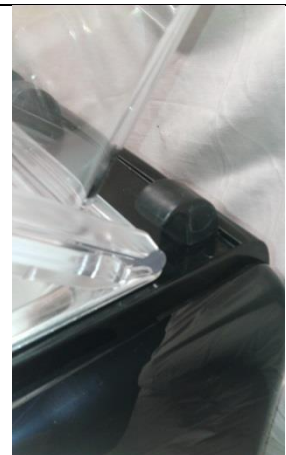

23.Refit the bowl ensuring the back of the bowl slips under the rear hinge.




24.Ensure the bowl is not being obstructed and is sitting correctly then clamp down.



25.To provide smooth action of the tap apply a little Vaseline to the o-rings.



26.Smeer a little Vaseline around the inside of the tap socket.

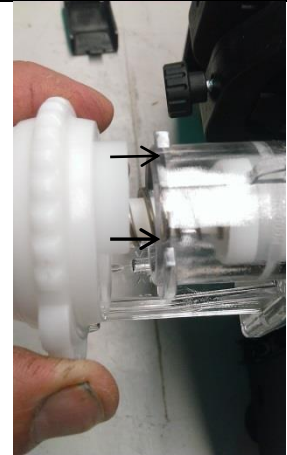

27.Refit the tap mechanism. Note the tab fits between the flanges.



28.Turn the ring nut to the lock position.




29.Apply Vaseline to the o-ring and socket, then refit the auger ring nut, turn to lock position.



30.Line up the tap handle with the tabs on the ring nut piston.




31.Slide the handle up.

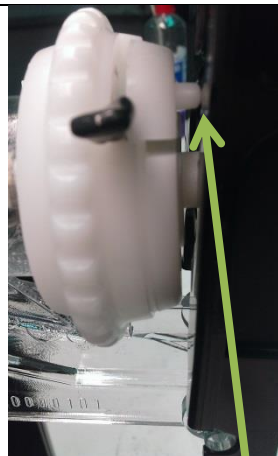

32.Watch this tab is not getting caught.



33.Fit the cover to lock the tap into place. Start down low and slide up.

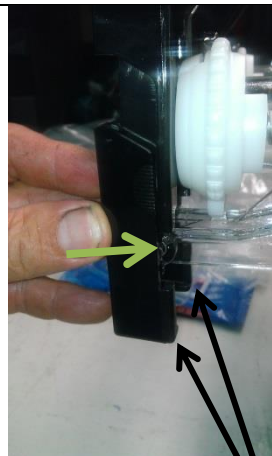

34. These tabs will slide over the knobs at the bottom of the bowl

Blendz

0800264948

www.blendz.co.nz

info@blendz.co.nz

See also:

https://www.youtube.com/watch?v=s8h1OU_T8UQ