

Entering Configuration Mode

Select YES (R) or NO (J) to the printed question and set it.


If YES: Press the RECEIPT key.

If NO: Press the JOURNAL key.

- Perform the operation with the front cover removed.

1. With roll paper set, switch the power on while pressing both the RECEIPT key and the JOURNAL key.

This causes the printer to enter the printer configuration setting mode, and the printer will print the following text in accordance with the selected menu for each item.

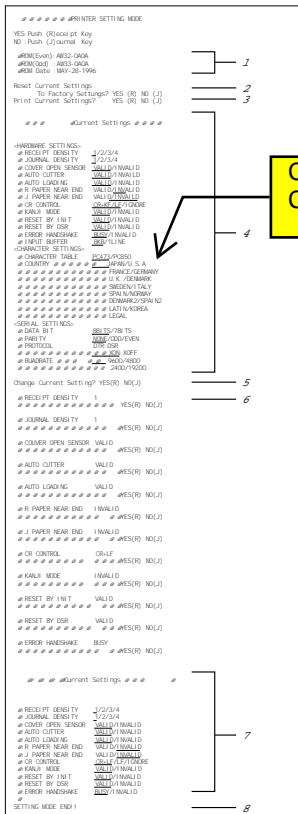

1. Prints the ROM version and the date.
2. If YES is selected, it resets the factory default settings, then moves to the following line.
If NO is selected, the following line is printed.

CHARACTER SET: SPACE
COUNTRY: U.S.A

If NO is selected, the line in 5 is printed.

4. The input buffer, character settings (International character code) and serial protocol settings are as set by the DIP switches.
5. If YES is selected, after the line in 6, printing of the settings for each item is begun.
If NO is selected, the printing of 8 is done, and setting of the printer ends.
6. Select NO until the menu of all the setting items is set as desired. When the content is correct, select YES. If YES is selected, the setting contents are recorded in non-volatile memory and the printer prints the next item. When Error handshake setting item is ended, the set contents (7) and 8 are printed, then printer set up is ended.

2. Turn the power off, then turn it on again.

The set contents become enabled.