






presskey Say
PRE V/ VOL+ (Active high)
NEXT/VOL+ : Short press to play/song, long press to play/song, Pause/hang up
PP/CALL : Short press to play/song, Pause/hang up
Long press reject up
Long press S Re-pair
WAKEUP : Short press to disconnect/
Long press to turn on/off the device
MODE : Short press to switch the transmit/receive mode

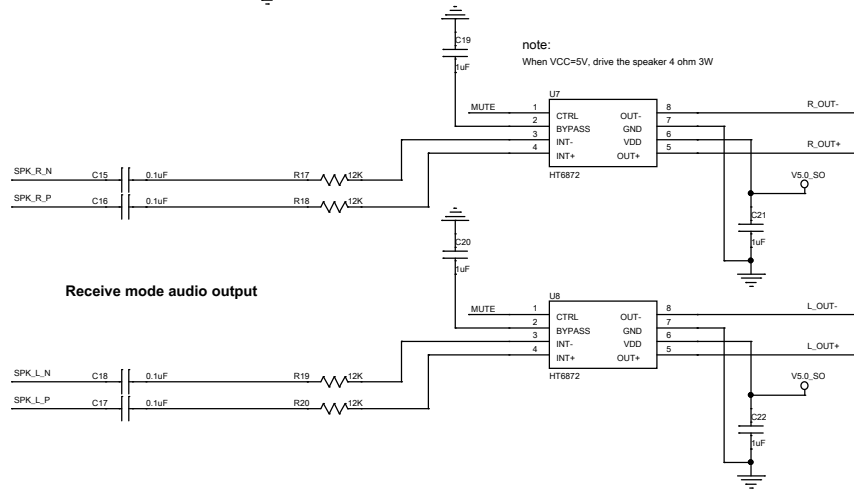


Description:
S/R: High output in transmit mode, low output in receive mode
LED: status indication

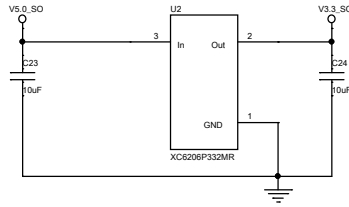

note:
When VCC=5V, drive the speaker 4 ohm 3W

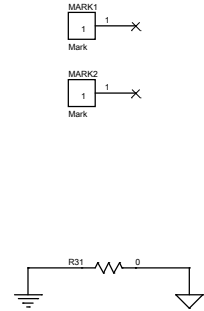


- hair Brief description of shooting mode:
1. Power on, the default launch mode
 - 2.PP/CALL Long press 6S
 3. After the pairing is successful, STAT Output high/low state
 4. Serial port: TTL3V3,9600,N,8,1, Hexadecimal format

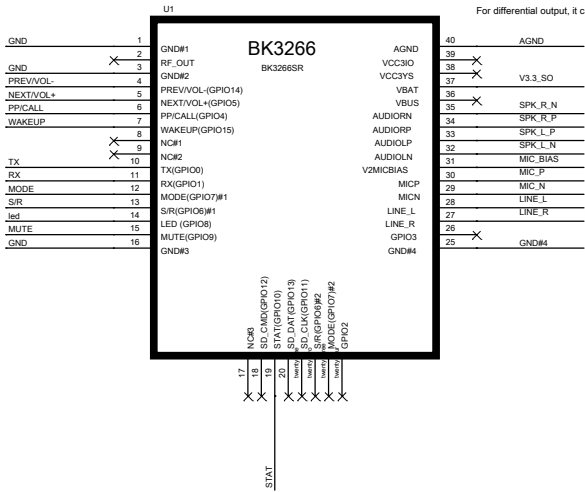

Description:
STAT: connect output high, disconnect output low

Note for BK3266: AGND needs to be connected to the ground of the power amplifier separately
When single-ended output, it must be connected to the ground of the power amplifier part, which can effectively suppress noise
For differential output, it can be left floating

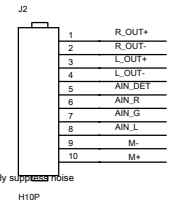


Launch mode audio input

note:
AIN_L and AIN_R are transmitter audio input terminals



Receive mode MIC enter

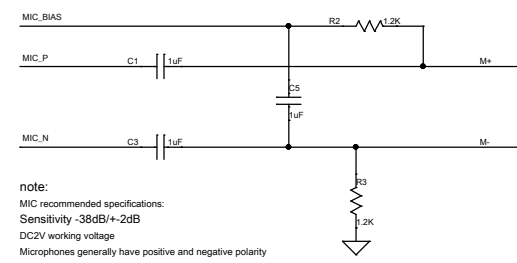

note:
MIC recommended specifications:
Sensitivity -38dB/+2dB
DC2V working voltage
Microphones generally have positive and negative polarity