

Doors and Windows

Removing and Installing Doors

9 80

Removal

1. Remove sheet metal covering the hinges.
2. Remove cotter keys from hinge pins.
3. Drive the upper hinge pin down with a hammer and drift.

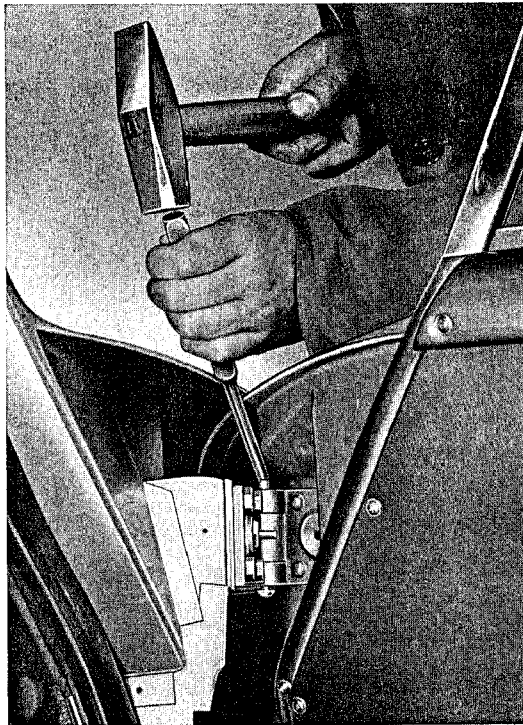


Fig. 30

To extract the hinge pin a piece of flat iron with an 8.5 mm dia. hole cut open with a hack saw can be used to advantage. While extracting the hinge pins, an assistant should hold the door.

4. Remove the rubber cap from the panel below the lower hinge and drive the lower hinge pin out from below using a hammer and drift.
5. Remove the door.

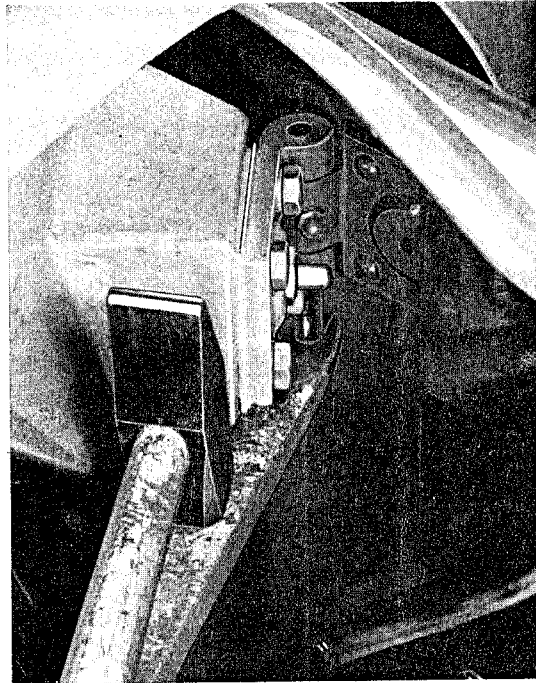


Fig. 31

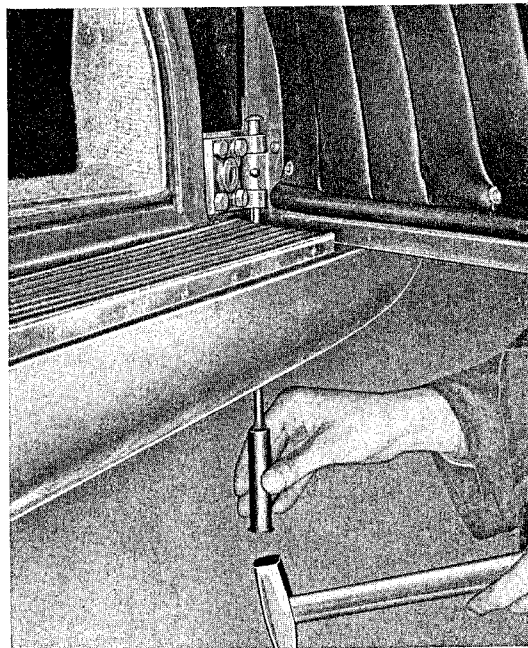


Fig. 32