

5. Pull head lining up to above the roof structure and remove by pulling forward.
6. Pull lid to within 2 inches of closed position.
7. Remove guides after loosening screws in both forward corners.

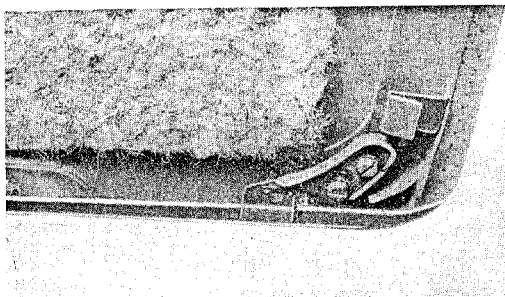


Fig. 4

8. Remove slotted retaining screws at guides, detach shackle from its bracket.
9. Using a screwdriver, push lifters off studs and take out.

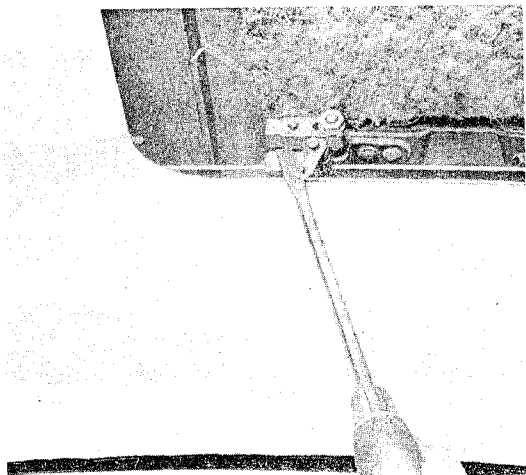


Fig. 5

10. Raise forward end of lid and slide it out.

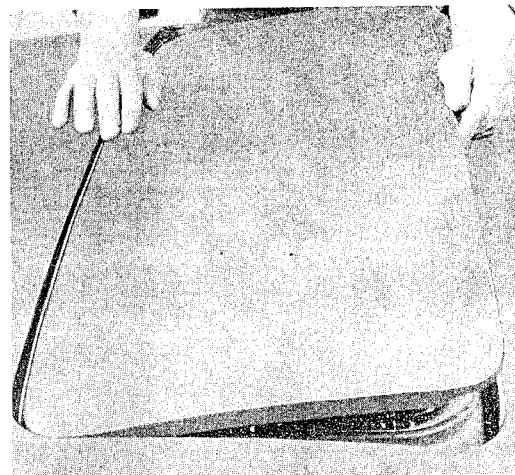


Fig. 6

Installation

1. Slide the lid in, make sure that both cable guides are completely in the back (within the cut out).
2. Mount lid lifters on studs of cable guides. Connect shackle to bracket and secure with screw. Notch the leafspring, fixed to the cover, beneath the studs of the guide of the lifter.
3. Check if lid moves uniformly, i.e., does not bind sideways; if necessary adjust cable in the drive housing (refer to instructions, pages SB 6 and SB 7).
4. Adjust lifters and lid lever (refer to page SB 6).
5. Install head lining and head lining frame reinforcement.
6. Push head lining frame reinforcement over head lining frame brace and secure both ends with adhesive tape.
7. Check sliding roof for proper seating and free movement.