

# Roadster Top

## General

The top is attached in the front to the window frame and in the rear to the body. The main hinge is located just behind the door post on the side wall. The top is supported by two forward bows and one over the rear window besides the front and rear fastening frames.

29 B0

## Removing and Installing Convertible Top

### Removal

1. Roll down windows or open both doors.
2. Release the two hold down latches at the windshield.
3. Remove the hold down brackets in the rear.

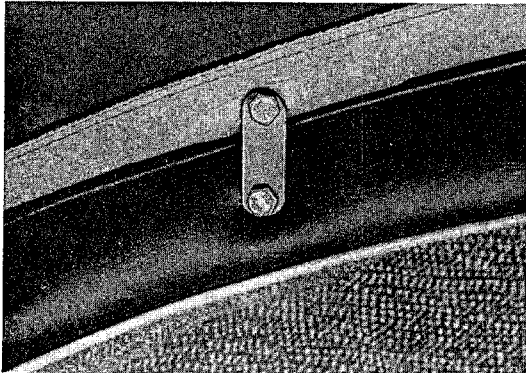


Fig. 144

5. Remove the two mounting bolts from the side brackets.

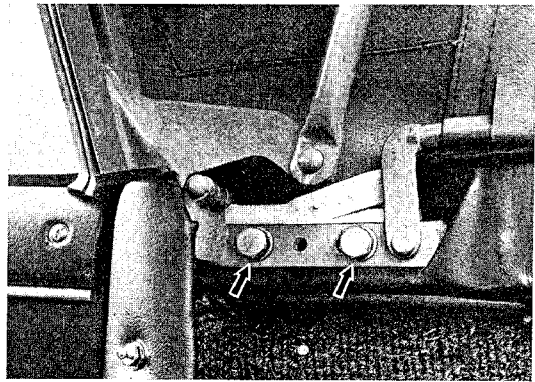


Fig. 146

4. Remove the hinge cover by removing the philips screw in its center.
6. Lift off top.

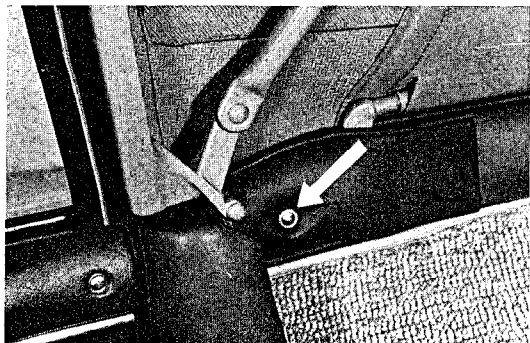


Fig. 145

### Installation

The installation is accomplished in the reverse order of removal, observing the following points: