

## Removing and Installing Steering Column Tube

### Removal

1. Remove steering wheel (21 St)
2. Disconnect cables from sockets
3. Unscrew nuts at mounting studs below instrument panel
4. Turn steering column tube slightly to remove it from the rubber cushion in the dashboard

### Installation

Installation is done in reverse order, observing the following points:

1. Check ease of movement of steering shaft bearing in tube.

### Note:

The steering shaft bearing is filled with special grease and therefore free of maintenance. If a replacement should become necessary, it can be pushed out from the lower end of the tube towards top.

2. Check rubber cushion in dashboard, if necessary replace.
3. Insert tube until the steering column projects  $.925'' + .0197''$  ( $23,5 + 0,5$  mm) beyond the upper edge of the steering shaft bearing installed in the tube (see fig. 75)

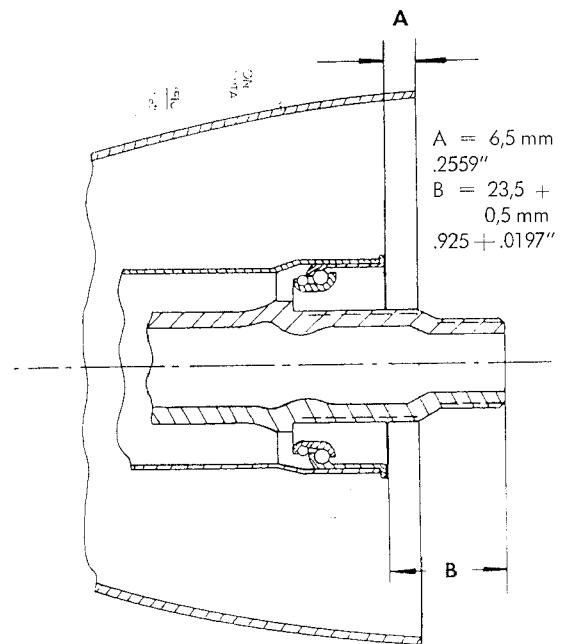


Fig. 75

4. When connecting the cables, take care to join only cables of matching colour.