

Replacing Brake, Turn Signal, and Tail Light Bulbs

32 LI

General

The combined brake, turn signal, and tail lights are located at the rear of the car on the left and right sides. The tail light is located toward the center of the vehicle while the brake and turn signals are on the outside. A common bulb serves both brake and turn signal. When signalling for a turn while braking, the brake light does not function on the side in question and begins to function in a normal turn signal manner. The brake light on the other side functions normally.

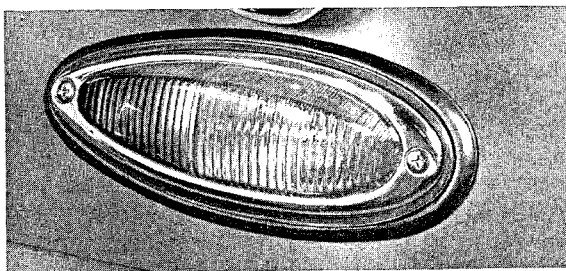


Fig. 64

Replacement

1. Remove phillips screws from the tail light frame and remove the lense.
2. Press in and turn the burned out bulb counter-clockwise to remove.
3. Clean contacts.
4. Install a new bulb of the same size.
5. Install tail light glass insuring a waterproof seal on the rubber gasket.

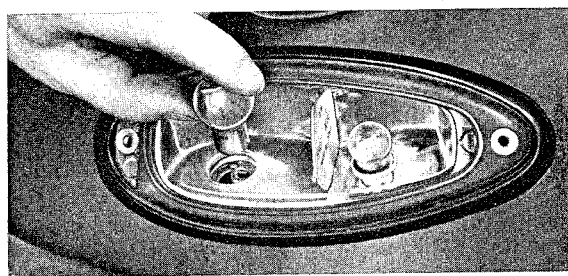


Fig. 65

Replacing Back-up and Licence Plate Light Bulbs

33 LI

General

The licence plate lights are located in the upper part of the rear bumper and have one 5 watt bulb each. The back-up light is located below the bumper in the center of the car and has a 25 watt bulb.

The licence plate lights go on with the parking lights which also light when the headlights are on. The back-up light lights automatically when the reverse

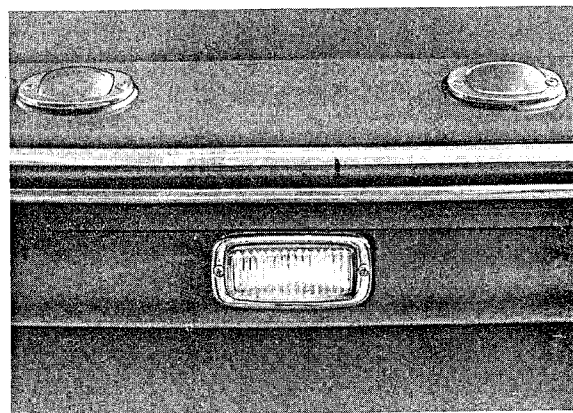


Fig. 66