

Converting from Soft to Hardtop

Removing soft top:

1. Remove front seats (18 B0).
2. Release the three top fasteners over the windshield and slightly raise the top in order to release the tension of the canvas.
3. Remove the side panels by removing the philips screw at the black arrow Fig. 132.

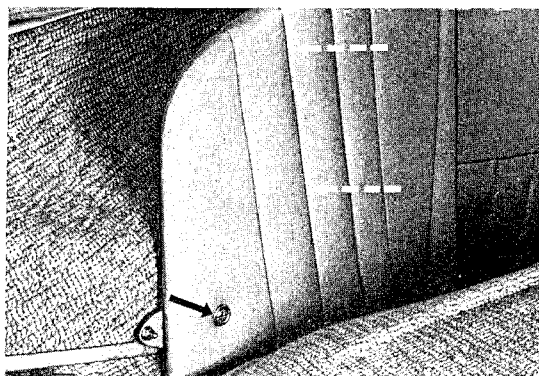


Fig. 132

4. Loosen the head liner from the side walls by removing the retaining screws.
5. Disconnect the turn buckle links from the top and body by loosening the tensioner and prying off the ball joints.

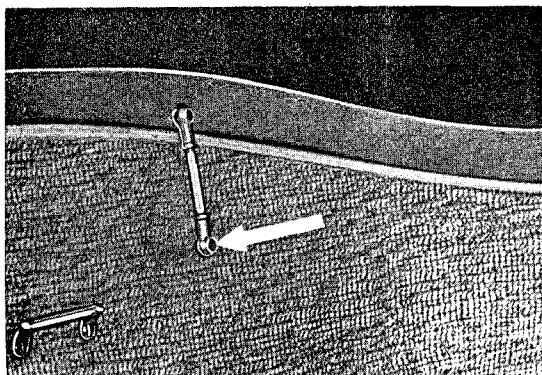


Fig. 133

6. Remove the screws at the two top fasteners.

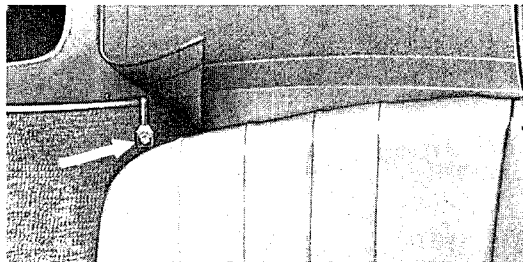


Fig. 134

7. Remove the nuts holding the hinge brackets in the door posts.

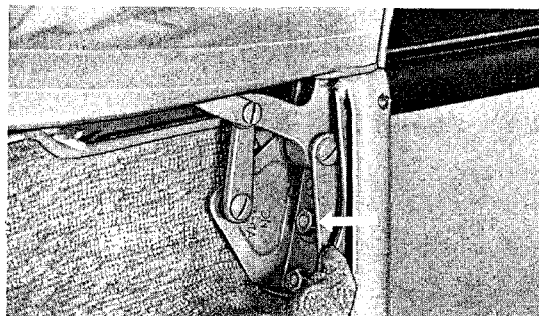


Fig. 135

8. Lift entire top assembly out and to the rear.

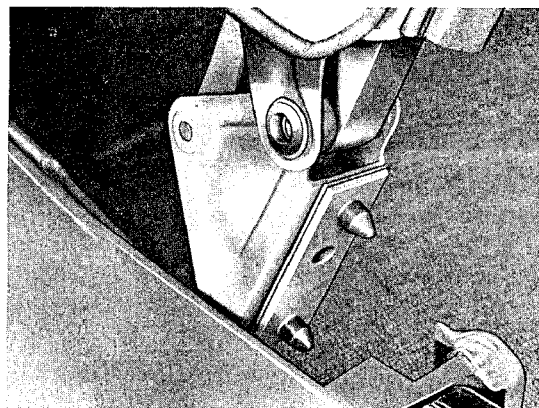


Fig. 136