



Pinion Shaft Holding Clamp

P 34a

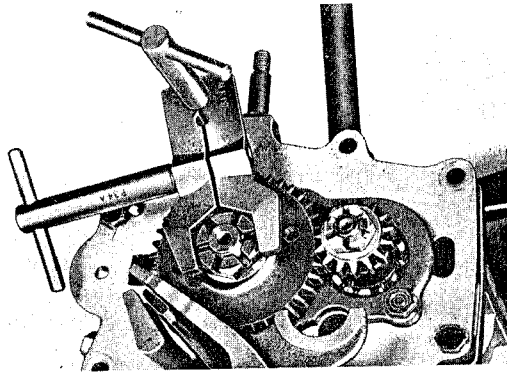

Application

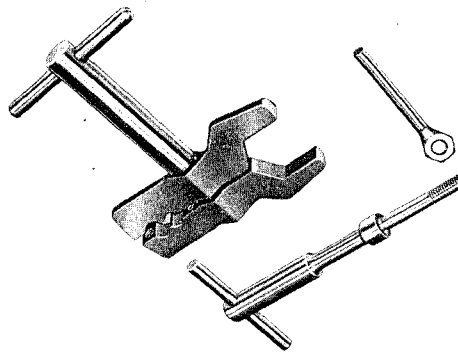

Tool


Use: To hold pinion shaft while measuring the backlash of the ring and pinion gear

See: Workshop Manual, group R, operation 14 RA


Subject to change

Wrench Guide and Holder

P 36

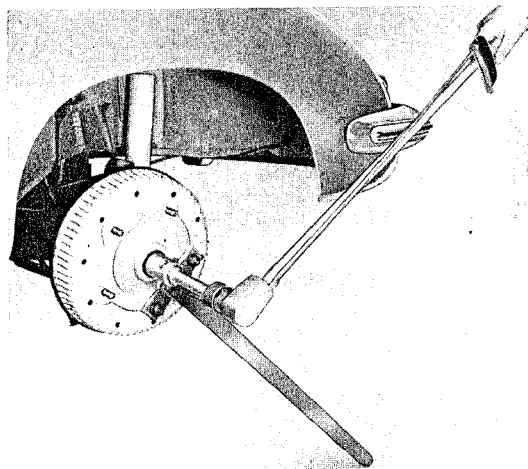

Application

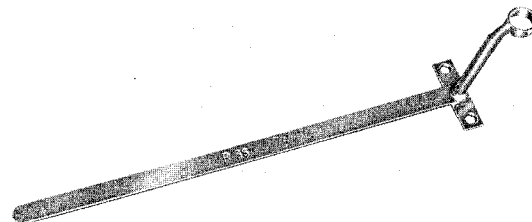

Tool

Use: To loosen and tighten rear axle nuts (used with P 42, P 44, and P 44a)

See: Workshop Manual, group R, operation 1 RA

Subject to change