

Fuel Cock

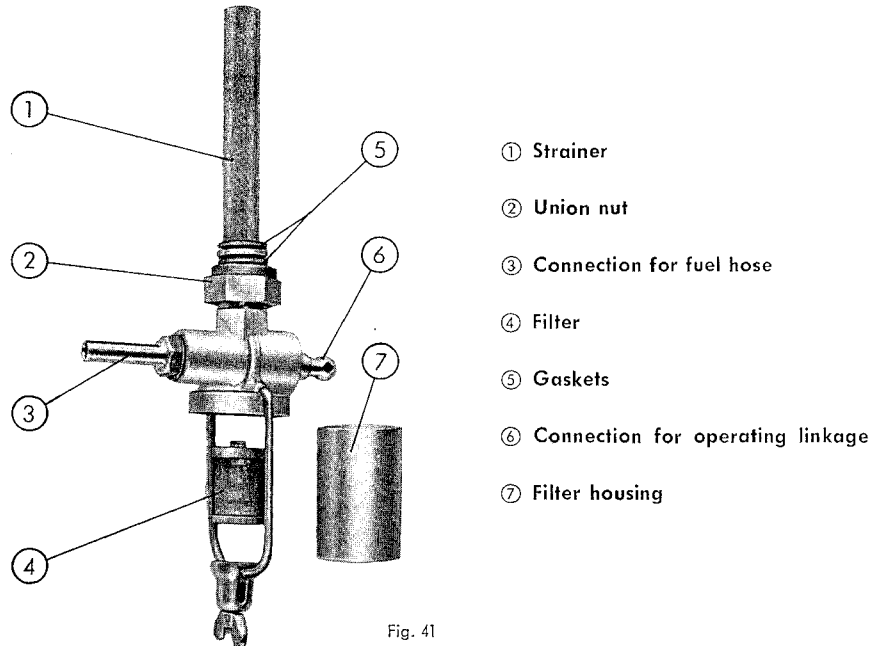


Fig. 41

18 Fu

Removing and Installing Fuel Cock

To clean the fuel tank and the strainer in front of the fuel shut-off cock, the fuel cock must be removed.

Removal

1. Remove and fully empty fuel tank (see 17 Fu).
2. Unscrew union nut and take off fuel cock.
3. Clean strainer with compressed air.

Installation

Install in reverse order, observing the following points:

1. Thoroughly clean fuel tank.
2. Use new gaskets (one each above and below the strainer edge).
3. Make sure that connection at fuel cock correctly aligns with operating linkage. If necessary, loosen union nut and slightly offset fuel cock.
3. After installation check connections for leaks.