



## Holder

P 36a

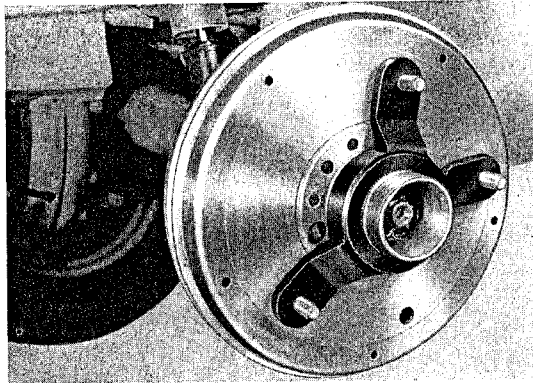

Application

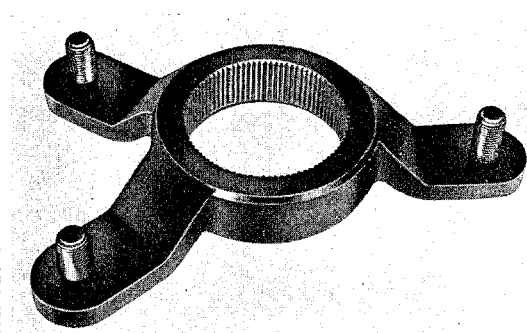

Tool


**Use:** To loosen and tighten rear axle nuts on cars with knock-off wheels, used with P 36, P 42, P 44, and P 44a

See: Workshop Manual, group R, operation 1 RA


Subject to change

## Holder for Main Shaft

P 37

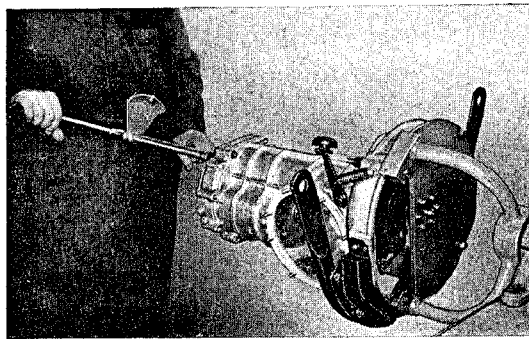

Application

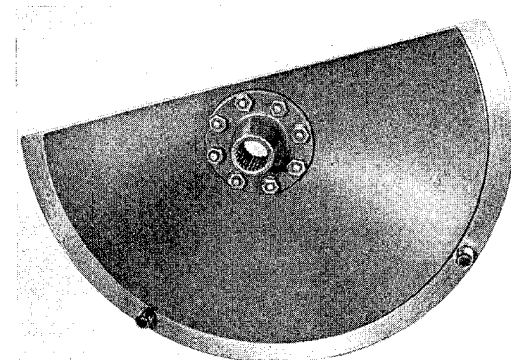

Tool

**Use:** To hold the main shaft while loosening and tightening castle nuts of the main and pinion shafts

See: Workshop Manual, group R, operation 2 RA

Subject to change