

REMOVING AND INSTALLING SLIDING ROOF TRANSMISSION

NOTE

It is necessary to pull off some of the forward roof lining when removing the transmission box.

Removal

1. Open sliding roof lid.
2. Remove drive housing cover located in center of forward roof structure.
3. Remove retaining plate located above drive pinion.
4. Remove both connections, top and bottom, of forward roof structure.
5. Remove drive housing.
6. Open zipper in roof lining.
7. Withdraw flexible shaft from sockets in transmission and motor.
8. Detach roof lining where necessary.
9. Remove both transmission retaining screws, withdraw transmission.

Installation

1. Insert transmission and secure with screws.
2. Glue roof lining in.
3. Install flexible shaft connecting transmission with motor.
4. Slide drive housing over drive pinion and secure with screws.
5. Place conveyer cables in connections, top and bottom, and screw to forward roof structure.
6. Insert conveyer cable in drive housing so that right cable lies in front of drive pinion and left cable lies behind it.
7. Install retaining plate making sure that drive shaft does not lie above it.
8. Reinstall drive housing cover.
9. Check lid for free movement, readjust if necessary.

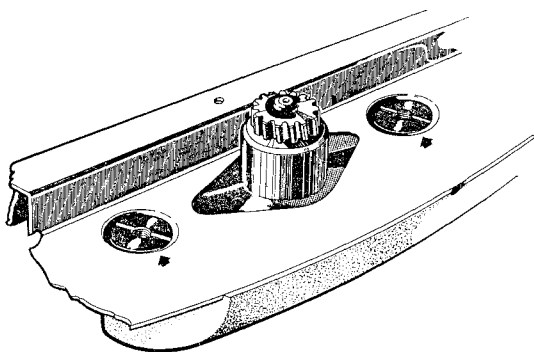


Fig. 10