

Installation

The installation is carried out in the reverse order of removal observing the following points:

1. Check junction box and exhaust pipe for damage.
2. Exhaust pipe gasket surfaces must be clean and smooth. Repair damaged flanges.
3. Use new gaskets.

12 EN

Removing and Installing Heater Cables

General

The heater cable should be removed only if it needs replacement. When removing the engine from the car the cable ends should be disconnected from the flap levers on the lower air guides.

Removal

1. Disconnect the cable ends from the levers on the lower air guides.
2. Remove floor tunnel cover.
3. Carefully mark the position of the shift lever base to simplify replacing (Fig. 94).

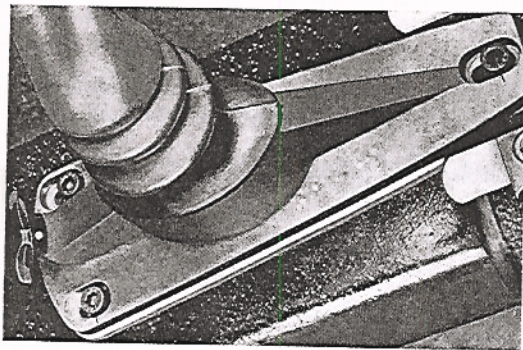


Fig. 94

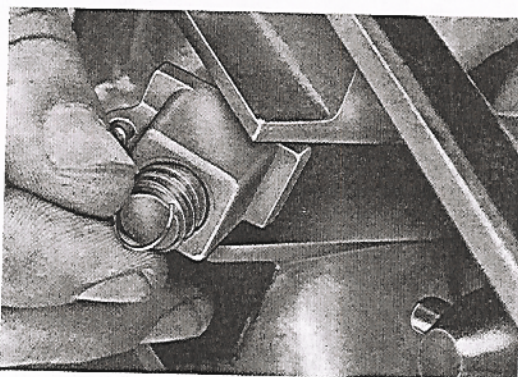


Fig. 95

7. Remove heater cables from the floor tunnel.

Installation

Note

The heater cable, approximately 320 cm (126 in.) long, is bent in half in such a manner that one side is 4 cm ($1\frac{5}{16}$ in.) longer than the other.

1. Thread the cable into the spindle nut up to the bend in the cable.

4. Remove the three mounting screws.

5. Pull lever base aside.