



Mandrel

P 64

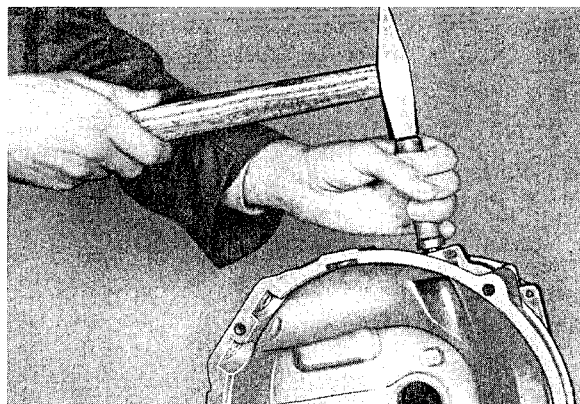

Application

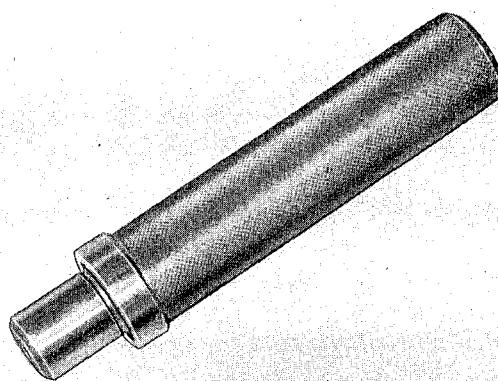

Tool


Use: To install outer bushing for clutch pivot shaft

See: Workshop Manual, group R, operation 20 RA


Subject to change

Plate

P 65

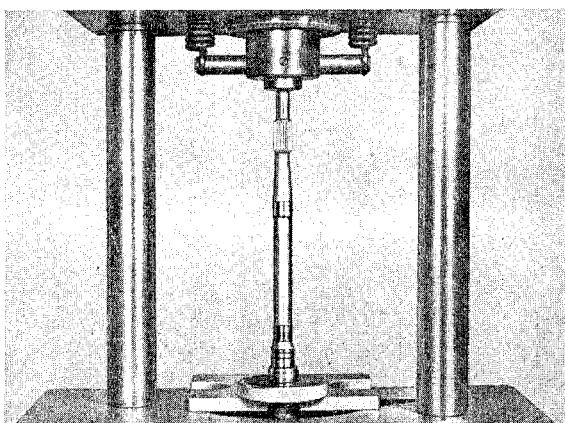

Application

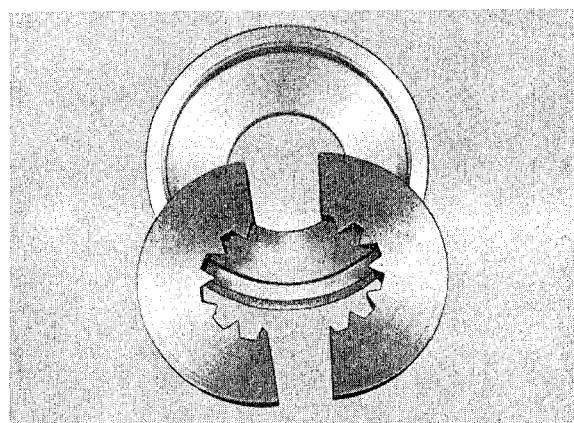

Tool

Use: To remove inner roller bearing race from main shaft

See: Workshop Manual, group R, operation 9 RA

Subject to change