

Removing and installing heat exchanger and exhaust pipes

Removal (engine dismounted from car)

1. Loosen carburetor heating hose clamps at heat exchangers and pull the hose off.

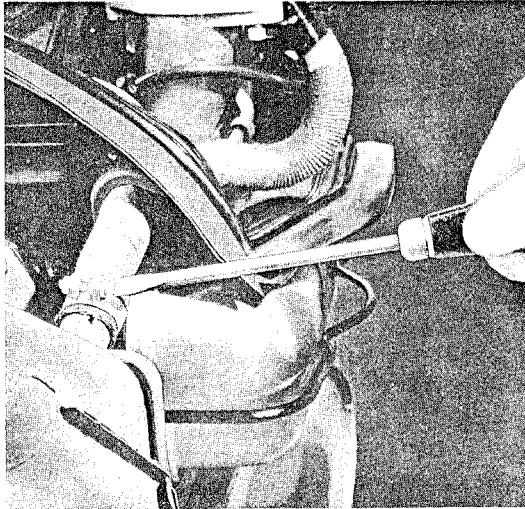


Fig. 9

2. Detach forward engine cover plate

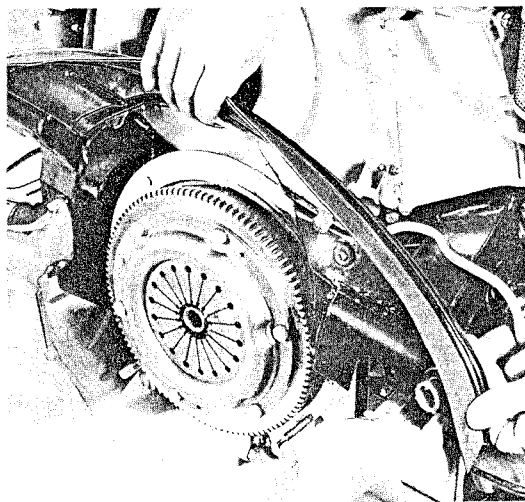


Fig. 10

3. Remove attaching bolt on front part of heat exchanger.

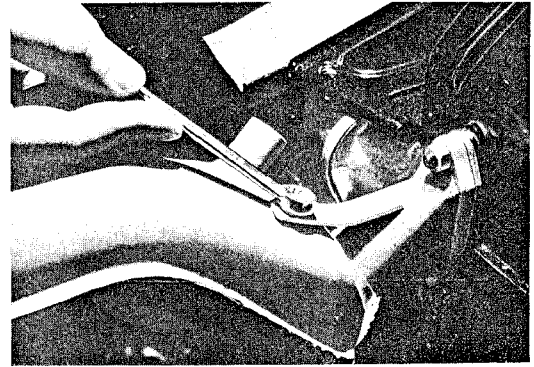


Fig. 11

4. Remove front and rear exhaust flange retaining nuts.

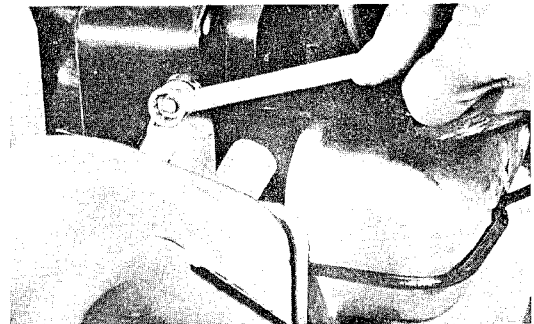


Fig. 12

5. Remove lower air guides.

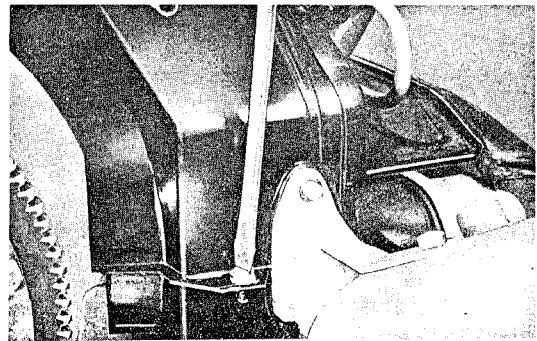


Fig. 13

6. Pull front and rear exhaust pipes away so that flanges clear the studs, remove heat exchanger assembly by moving it downward.