

2. Inspect thrust washer for wear and replace if necessary. Caution: install the thrust washer using a screwdriver to prevent the washer from falling into the timing gears.

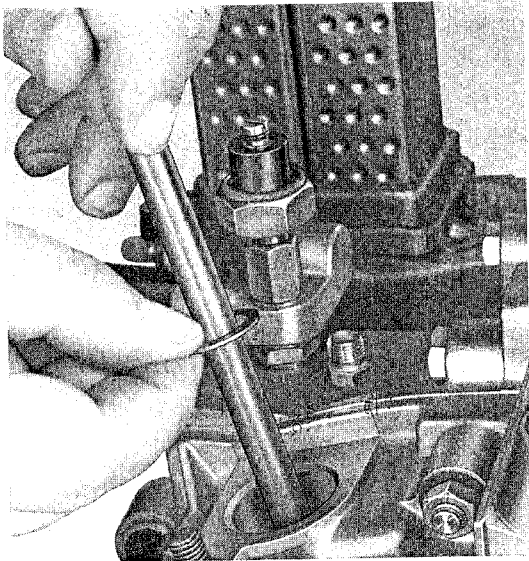


Fig. 197

3. Bring cylinder I to TDC (both valves closed) and install distributor drive shaft.

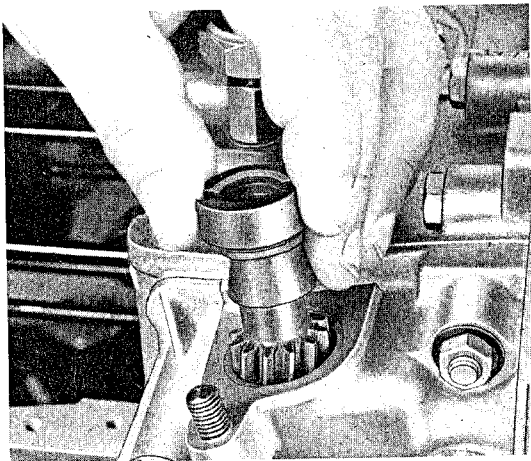


Fig. 198

The slot in the drive shaft must be parallel to the timing case cover joint and offset toward the V-belt pulley.

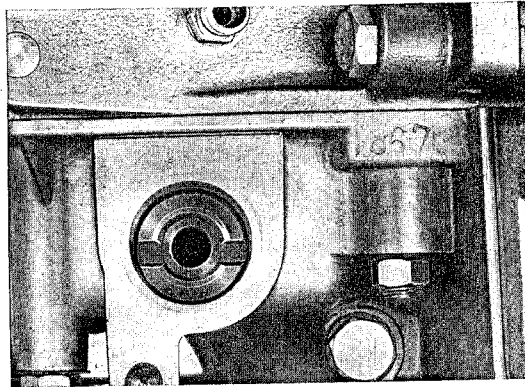


Fig. 199

4. Install the drive shaft spring using a welding rod.

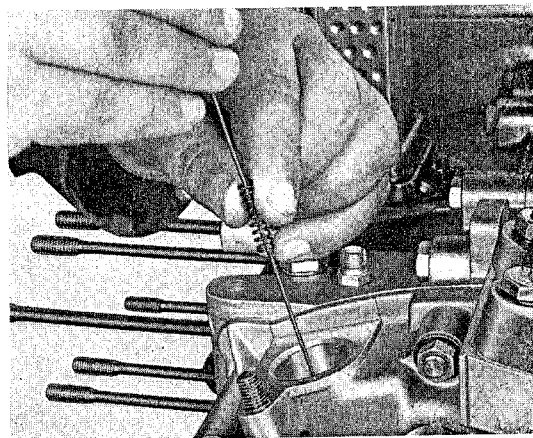


Fig. 200

5. Install distributor.
6. Connect cable I.
7. Adjust ignition timing.
8. Install distributor cap.