

## Removing and Installing Rear Window

16 B0

The removal and installations is accomplished in a manner similar to that of the windshield.

## Removing and Installing Side Windows

17 B0

### Removal

1. Open the window and remove the three screws which hold the window linkage.

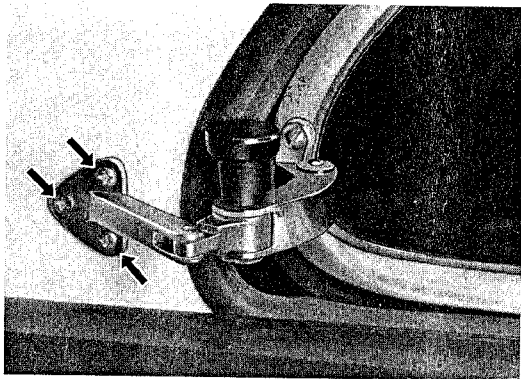


Fig. 85

2. Remove two screws from each hinge and remove the window.

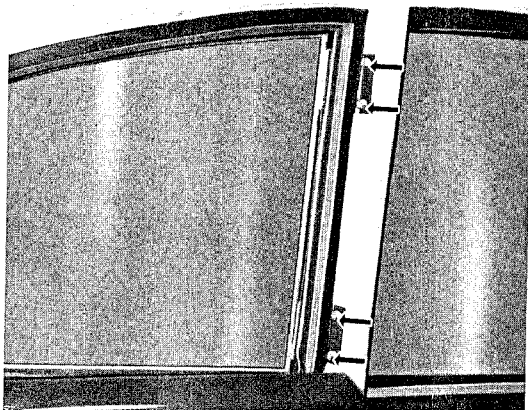


Fig. 86

3. If necessary, remove the screws from the hinges and remove the hinges.

### Disassembling

1. Pull weather strip from the outer edge of the window frame.
2. Remove end piece from the frame as in Fig. 87.
3. Remove the straight section of the window frame and remove the pane from the frame.
4. Remove the rubber strip from the frame.

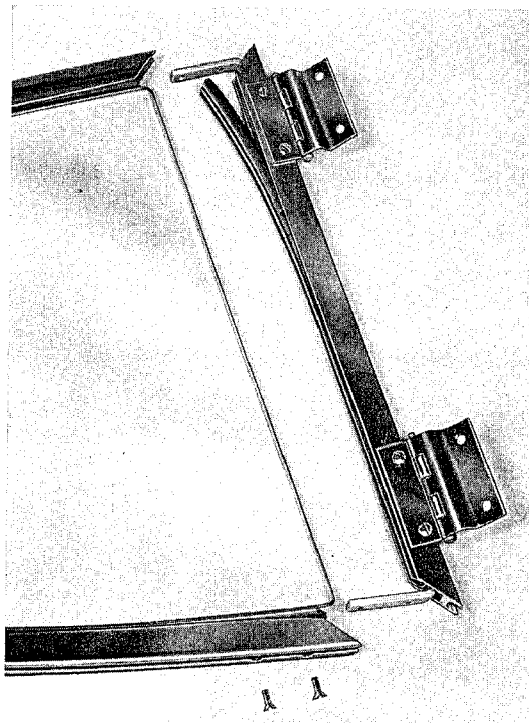


Fig. 87