

### Installation

The installation is accomplished in the reverse order of removal observing the following points:

1. Grease lock assembly.
2. Install upper lock portion in the hood.
3. Install lock assembly in the body lightly tightening the four screws.
4. Check the position of the lock by closing the hood.
5. Tighten the four mounting screws.
6. Grease release cable (if cable is removed) and connect to lock assembly. Fasten cable clamp.

### Emergency Access to Rear Hood

#### General

The emergency access to the rear lock is located in the engine compartment floor and can be reached from beneath the car.

2. Using a rigid steel rod, release the catch as shown in Fig. 18. (Fig. 18 shows the operation as seen from the engine compartment, engine removed.)

1. Remove the rubber plug from below (Fig. 17).

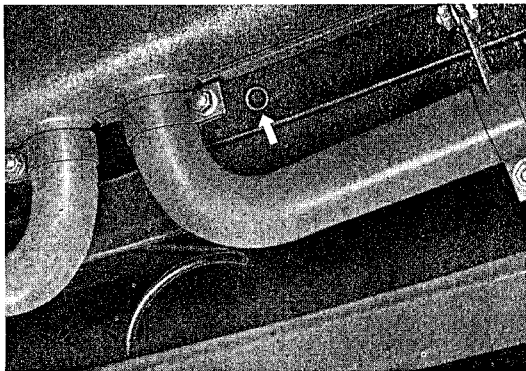


Fig. 17

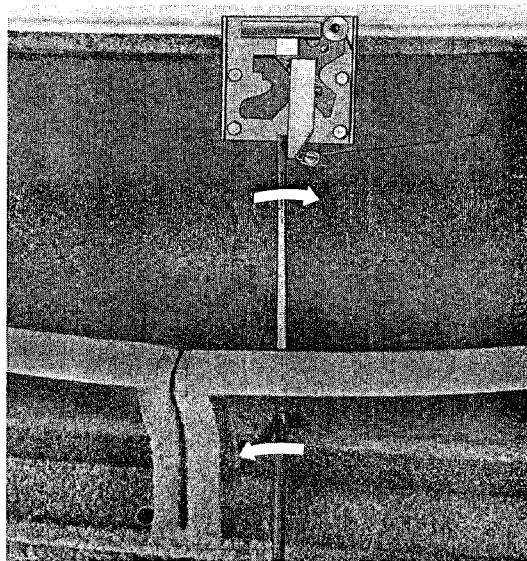


Fig. 18