

Fig. 7

Installation

Installation is accomplished in reversed order. It should be ascertained that the O-ring is in good condition, otherwise it should be replaced.

Reconditioning fuel pump

Disassembly

1. Remove hex bolt which secures cover.
2. Remove cover and fuel screen.
3. Remove six cheese-head screws securing the upper assembly, withdraw assembly.

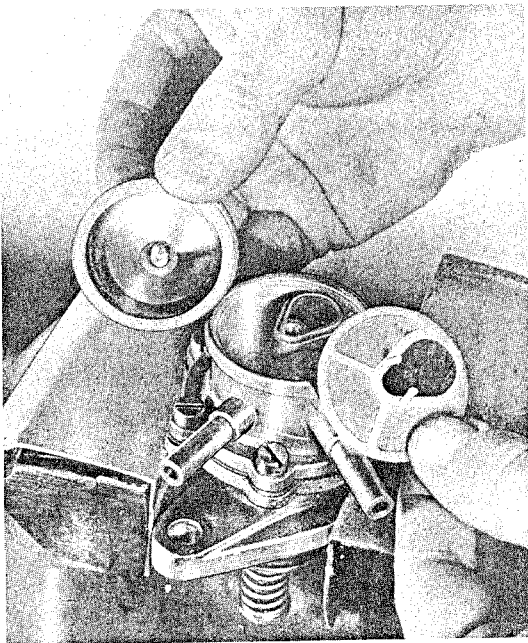


Fig. 8

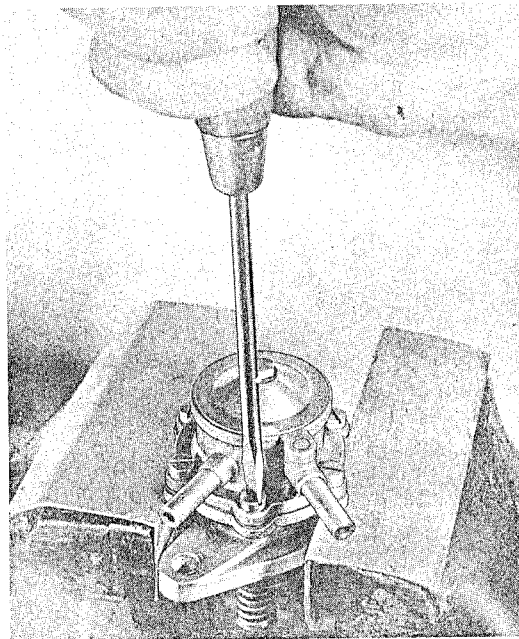


Fig. 9