

VENTILATING PLANT

General Remarks

The fresh air vent is located on the center piece under the windshield. A water receptacle, located under the fresh air vent, collects the water which may enter the vent and drains it.

There are two fresh air ducts located in the inner wall of the luggage compartment. Their two ventilation flaps can be operated from the passenger compartment, allowing the air to enter according to their position.

Description of Function

When the vehicle is in motion, the air pressure causes air to be pressed into the luggage compartment, from where it enters the passenger compartment through the adjustable air flaps in the fresh air ducts, and is then conveyed either to the windshield or the floor. An intermediate position of the ventilation lever divides the air accordingly between the floor level and the windshield.

Ventilation lever and flap position

Ventilation lever position 1

The ventilation flaps in the fresh air ducts are closed: no air can enter the luggage compartment.

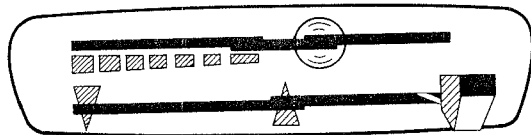


Fig. 14

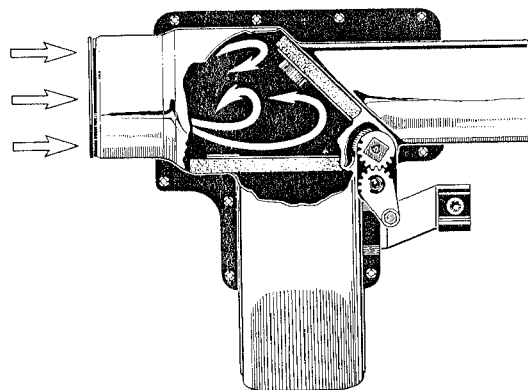


Fig. 15