



Mandrel

P 61

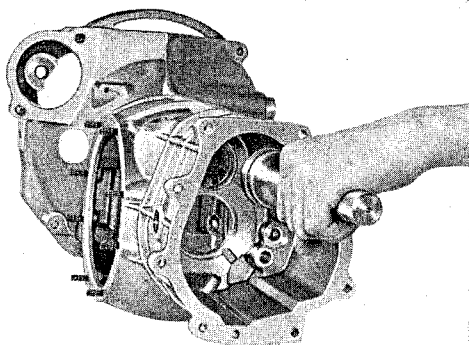

Application

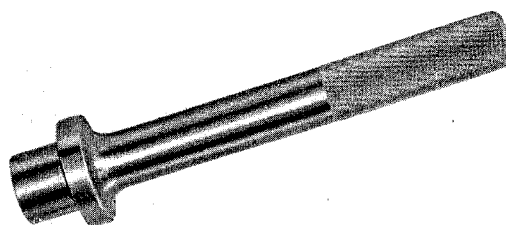

Tool


Use: To install roller bearing race in transmission housing (main shaft)

See: Workshop Manual, group R, operation 2 RA


Subject to change

Drift

P 62

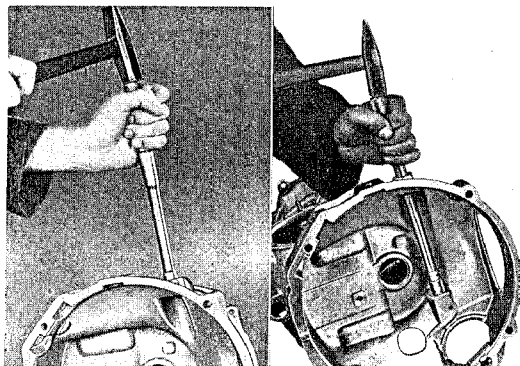

Application

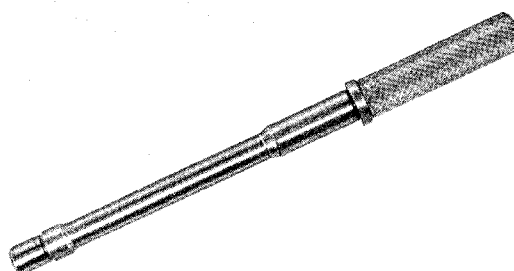

Tool

Use: To remove or install clutch pivot shaft bushing

See: Workshop Manual, group R, operation 20 RA

Subject to change