

FUEL SELECTOR VALVE

1. Gasket
2. Fuel valve retaining nut
3. Fuel hose connector
4. Filter
5. Sediment bowl
6. Wire screen
7. Fuel outlet (AUF: open)
8. Gasket
9. Rubber grommet
10. Plug

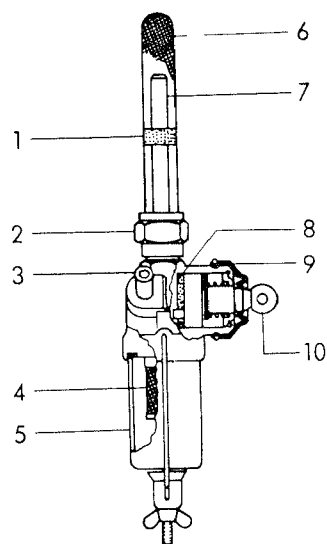


Fig. 4

REMOVING AND INSTALLING FUEL GAUGE SENDING UNIT

Removal

1. Disconnect cable at battery.
2. Drain (hose) gasoline.
3. Place a basin underneath the fuel tank to collect fuel.
4. Remove fillister-head screws holding fuel gauge sending unit and remove unit.

In case of extremely dirty fuel, remove and thoroughly clean tank (see page SF 21).

Installation

Install fuel gauge sending unit by reversing the removal procedure and observing the following points:

1. Replace "Thiokol" gasket, if necessary.
2. Upon reassembly, check sending unit for possible leaks.

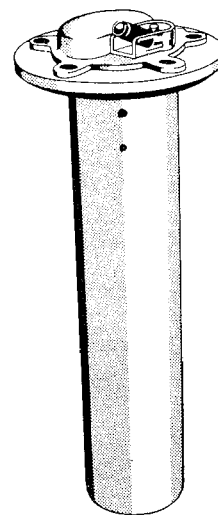


Fig. 5