

4. In order to properly seal the holes in the body panelling, mount the rubber caps according to Fig. 3.

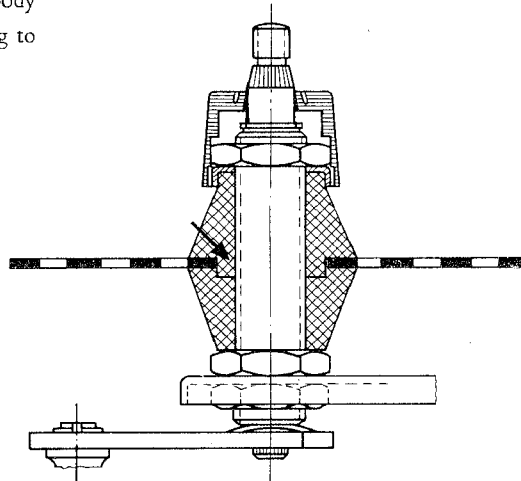


Fig. 3

Trouble and remedy

Rattling of the windshield wiper:

Check whether rubber spacer washers are mounted between the crank of the windshield wiper arm bearing and the joint bar; install these washers, spare part No. 999.704.122.50, if necessary.

Check whether the rivets of the tension piece for the wiper arm are properly fixed, if not, retighten the rivets.

The wiper rubber must turn after each wiper cycle. If it remains in one position, turn the wiper arm so that it travels parallel to the windshield.

Remove any traces of oil, as, owing to a different coefficient of friction, the wiper blades rattle at low speed.

Maintenance

Ballsockets of the joint bars require no servicing. Ascertain that wiper blades rest properly on the windshield, and that they have an equal amount of travel.