

Emergency Access to Front Hood

General

The emergency access to the hood lock is located under the left front fender above the horn as shown in Fig. 12.

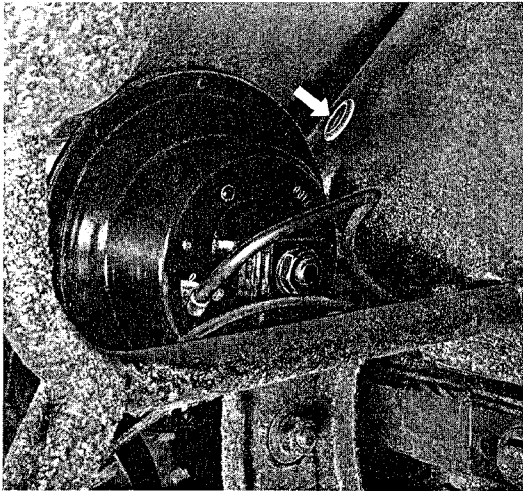


Fig. 12

In the event that the hood release cable becomes inoperative the hood may be opened in the following manner:

1. Turn front wheels fully to the right.
2. Remove the horn if necessary.
3. Remove rubber cap (at arrow Fig. 12).
4. Using a 3 mm dia. (wire clothes hanger) wire with its end bent in a small hook, reach into the hood lock and pull the release lever arm.

Note

It is important that the jack is always placed correctly in the holders. The lifting head must be to the right (driving direction). In the opposite position it will block the emergency access.

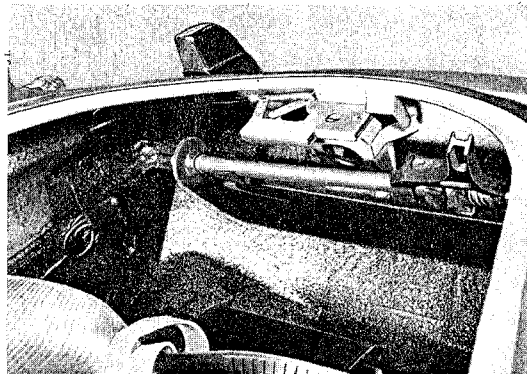


Fig. 13

Removing and Installing Rear Hood

4 B0

Removal

1. Pull hood release next to the left rear seat and raise hood into latched position. Mark position of hood on hinge.
2. Loosen two bolts on each hinge (Fig. 14).
3. While holding the hood remove the two screws farthest from the hinge first; then remove remaining screws removing the hood.
4. If necessary remove hinges by removing the mounting screws (5 B0).

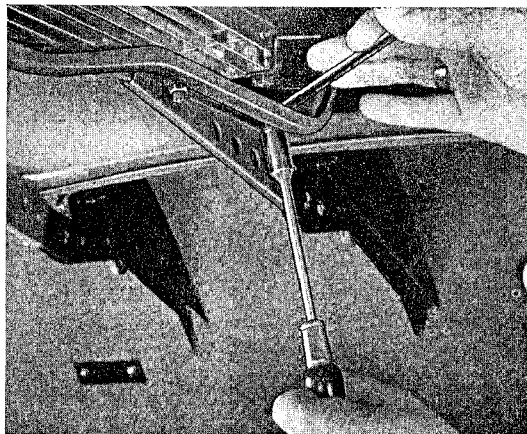


Fig. 14