

ADJUSTING SLIDING ROOF

Adjusting Position of Sliding Roof Lid

a) Forward end, right and/or left side:

1. Remove sliding roof lining and frame (see p. SB 1)
2. Lid lever is adjusted by resetting lock nuts (2). Loosen bolts (4) securing guide (3), raise or lower sliding roof lid (1) by resetting lock nut (2), re-tighten guide.

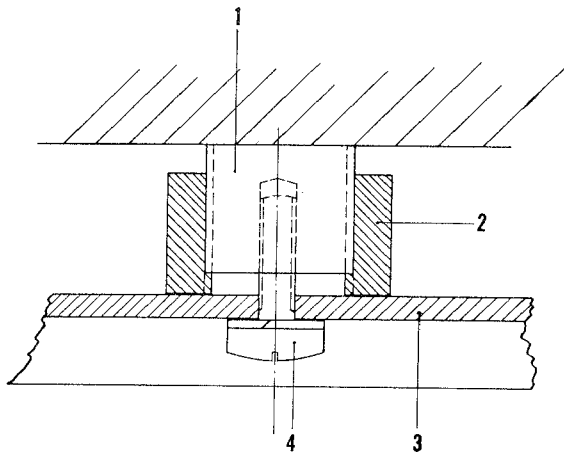


Fig. 11

b) Rearward end, right and/or left side:

1. Remove head lining (see page SB 1).
2. Loosen nut (1) on stud (3); nut is 5 mm. By turning adjustment screw (2) in right or left direction, stud in oval orifice of lifter (4) is brought to desired position.

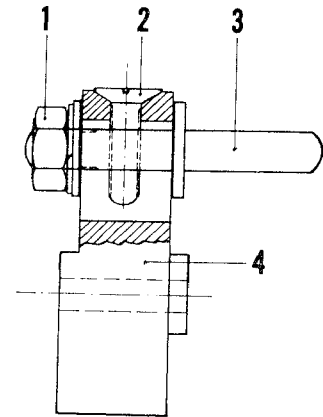


Fig. 13

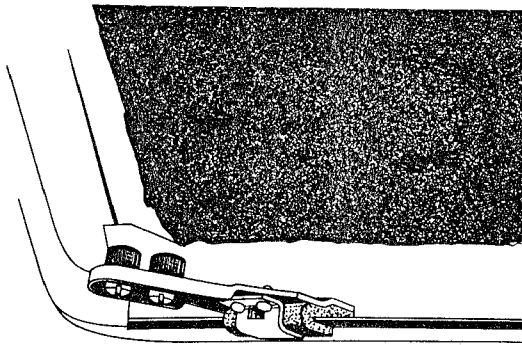


Fig. 12

3. Retighten nut on stud.
4. Check lid for free movement.
5. Reinstall head lining (see page SB 2).

3. Check lid for free movement.
4. Reinstall head lining (see page SB 2)