

18. Connect heater Bowden control cable. The cable should be placed underneath the front compartment mat and secured with a clamp utilizing a fuel tank securing bolt, then guided through a rubber grommet in the forward transverse panel of the front compartment to the heater unit (see Fig. 14).
- Caution: Do not bend the Bowden cable. Fasten cable conduit tube securely with the clamp.

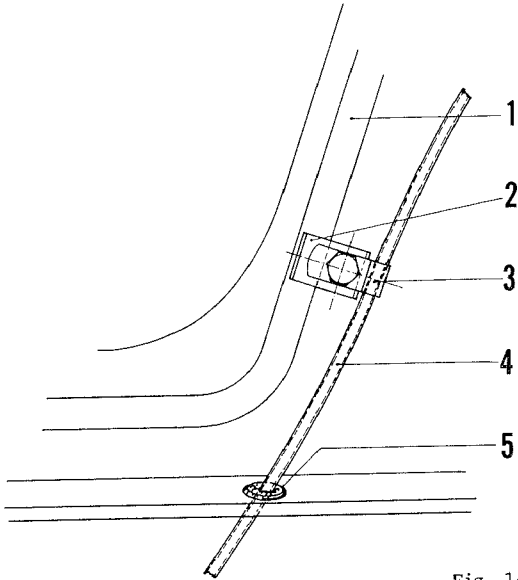


Fig. 14

- 1 Fuel tank
- 2 Fuel tank bracket
- 3 Clamp
- 4 Bowden cable
- 5 Grommet

19. Move heater control lever in control assembly to Position 4 (see Fig. 15). Move control lever on heater control switch to the "AUS" ("OFF") position and fasten Bowden cable to the arm with the terminal screw (see Fig. 16).

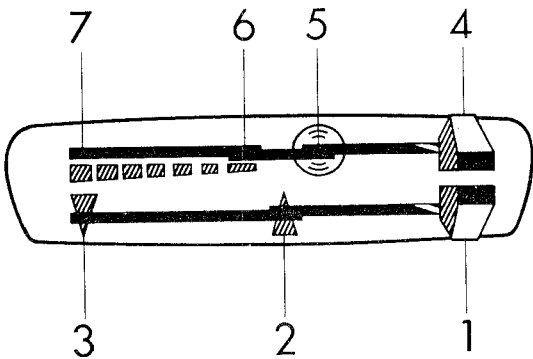


Fig. 15

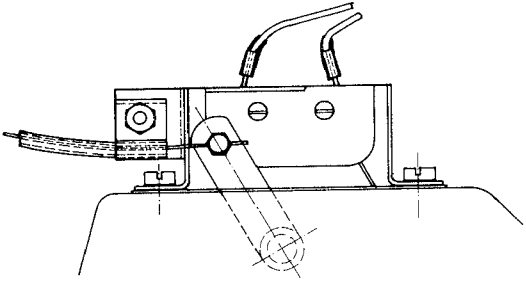


Fig. 16

- 20. Remove screens from fresh air ducts and install warm air hose, by placing it under the compartment mat, between the heater and the ducts, shorten if necessary.
- 21. Remove sponge rubber stoppers from the floor air vents.
- 22. Check heater and ventilator for proper operation.
- 23. Check fuel connections for leaks.
- 24. Reinstall floor boards.
- 25. Reinstall rubber seal in battery cable conduit tube (see Point 2).
- 26. Install heater cover.