

Removing and installing 356 B/T 6 heater cables

General

The heater cables need not be removed, except when replacement is contemplated.

Removal

1. Detach cable ends from connecting levers at air gate assemblies.
2. Remove floor tunnel cover.
3. Mark original position of shift lever base to simplify reassembly.

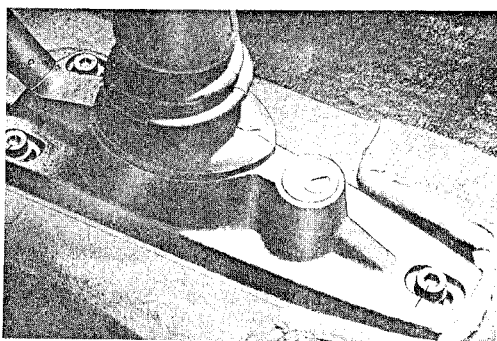


Fig. 17

4. Remove the three retaining bolts from shift lever base.
5. Lay shift lever base on its side.
6. Remove lock ring from heater spindle with a small screwdriver, turn spindle now until spindle nut is removed.

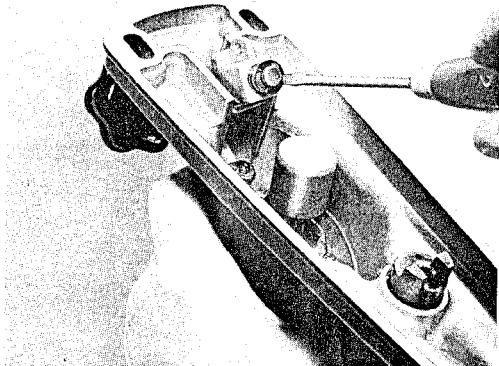


Fig. 18

7. Pull out heater cables.

Installation

1. Thread one end of heater cable through eye in spindle nut and pull cable through to the bend.
2. Insert both ends of cable into conduit tubes; make certain that cables do not cross.
3. Install spindle nut on heater control spindle with cable eye pointing to the front of car.

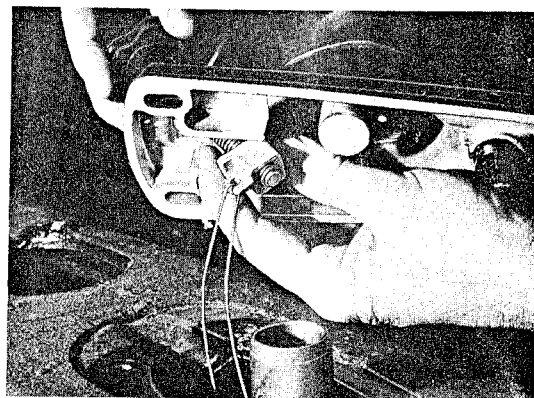


Fig. 19

4. Install lock ring on control spindle.

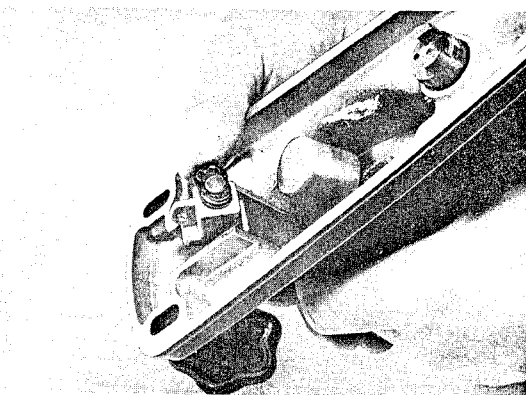


Fig. 20