

Fig. 77

5. Disconnect oil filter lines.
6. Disconnect ignition wires from spark plugs and ignition coil and remove distributor cap.
7. Remove all screws securing fan housing.
8. Lift fan housing from engine (Fig. 78).

Installation

The installation is accomplished in the reverse order of removal observing the following points:

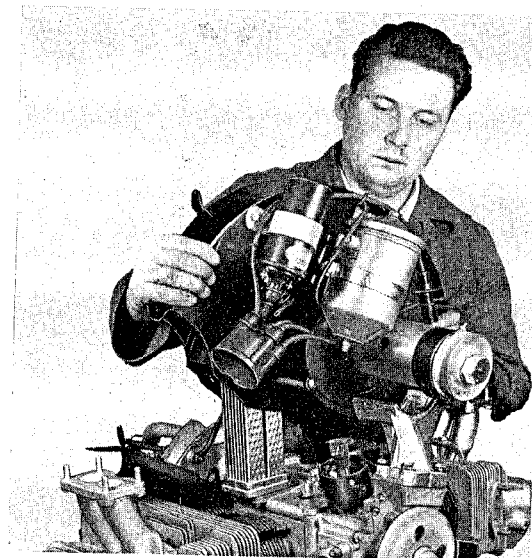


Fig. 78

1. A tight fit of duct plates to the fan housing is necessary to prevent cooling failure.
2. Note correct generator connections: thick yellow-white lead to terminal D-, thin black lead to terminal DF, thick red lead to terminal D+.
3. Adjust throttle linkage.
4. Inspect oil breather pipe gasket and replace if necessary.

5 EN

Removing and Installing Blower Assembly

General

The removable generator bracket makes it possible to remove the blower assembly without disturbing the fan housing. This is accomplished in the following sequence:

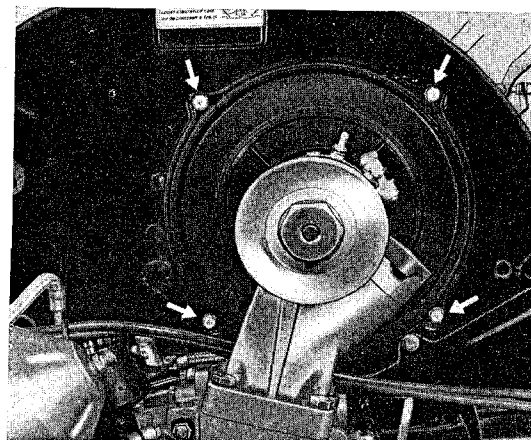


Fig. 79

Removal

1. Disconnect generator leads and remove V-belt.
2. Remove generator clamp.
3. Remove oil breather pipe.
4. Remove oil filter.
5. Remove four mounting screws on fan housing.

6. Remove generator bracket, carefully covering crankcase opening to prevent entry of foreign matter.