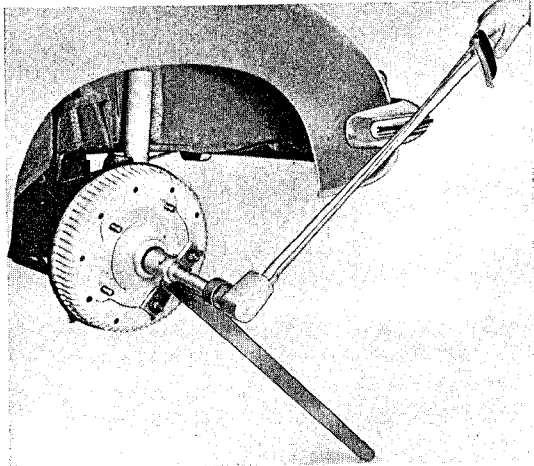
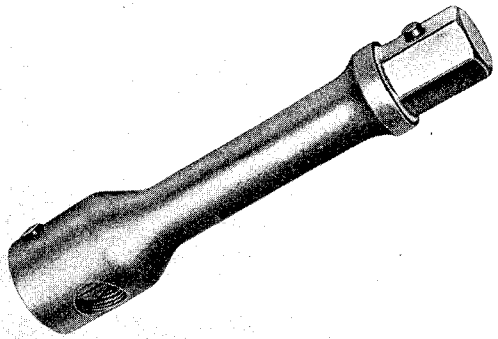
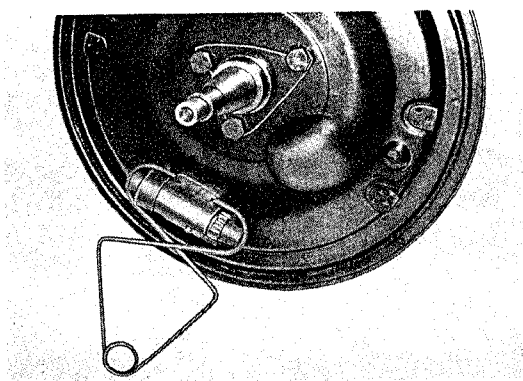
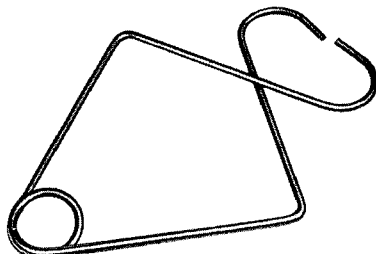


Extension for Socket P 44	P 44a
 <p data-bbox="516 955 630 982">Application</p>	 <p data-bbox="1088 871 1136 898">Tool</p>
<p data-bbox="332 982 1356 1045"><b>Purpose:</b> Used in conjunction with P 36, if nec. P 36 a, P 42 and P 44 for tightening and loosening rear axle nuts.</p> <p data-bbox="332 1045 1015 1075">See Workshop Manual Group T    Procedures: 4 Ti, 8 Ti, 10 Ti, 11 Ti.</p> <p data-bbox="714 1081 950 1108">Subject to Modification</p>	

Piston clamp for Wheel Brake Cylinder	P 47
 <p data-bbox="519 1675 633 1703">Application</p>	 <p data-bbox="1096 1669 1144 1696">Tool</p>
<p data-bbox="344 1743 1193 1774"><b>Purpose:</b> To hold the pistons in wheel brake cylinder while brake shoes are removed.</p> <p data-bbox="344 1810 1026 1841">See Workshop Manual Group T    Procedures: 3 Ti, 7 Ti, 8 Ti, 11 Ti.</p> <p data-bbox="727 1879 961 1906">Subject to Modification</p>	