

## Weather Strip

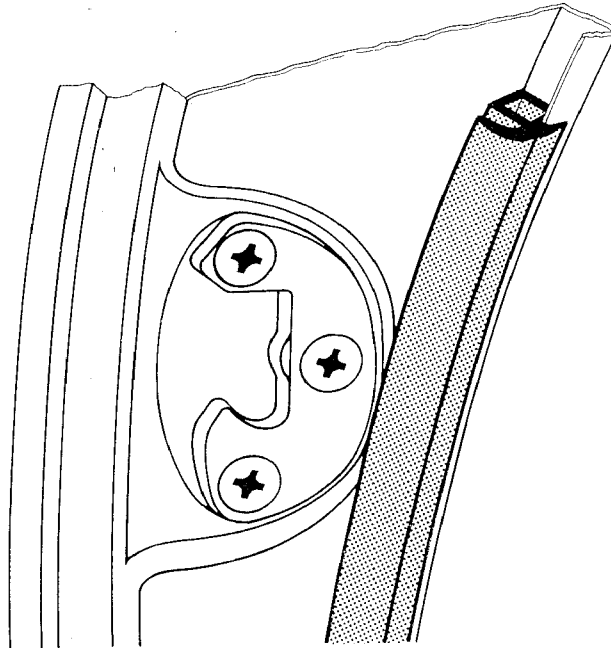


Fig. 33

### Installation

The installation is accomplished in the reverse order of removal observing the following points:

1. Inspect weather stripping and install new weather strip where necessary.
2. After installing the door, check whether the door fits flush with the body on all sides. The adjustment can be made by removing or installing shims at the door hinges. Remove the four cap screws shown in Fig. 34 and adjust as required.
3. Test the weather strip around the doors by inserting a piece of paper and closing the door. If the paper can be pulled out easily, it is necessary to install sponge rubber stripping under the weather strip to obtain the required contact.
4. Grease the hinges cleaning nipples before connecting the grease gun.
5. Check the door lock to see if the door closes sufficiently and is properly closed. The lock plate can be moved vertically and horizontally by loosening the three phillips screws.

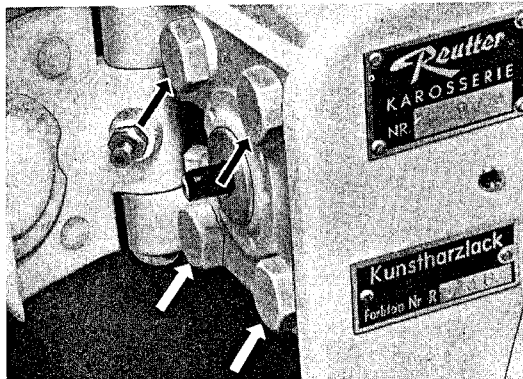


Fig. 34

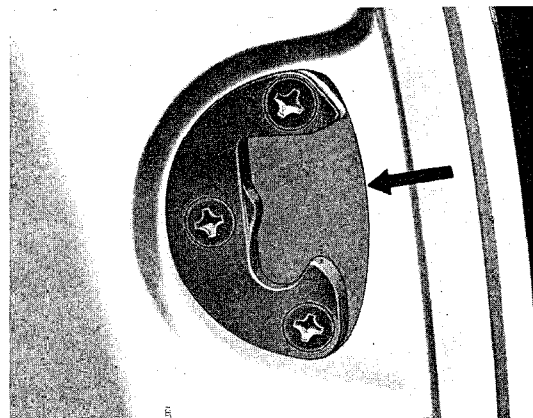


Fig. 35