

Fig. 60

BAL Switch

- | | |
|-------------------|---------------------|
| ① Rubber mount | ⑤ Clamp |
| ② Base | ⑥ Wire set |
| ③ Steering column | ⑦ Switch |
| ④ Housing | ⑧ Horn contact ring |

Removing and Installing BAL Switch

30 LI

Removal

1. Remove steering wheel (22 ST).
2. Disconnect all plug connectors.
3. Remove screws from the horn contact ring and remove the ring.

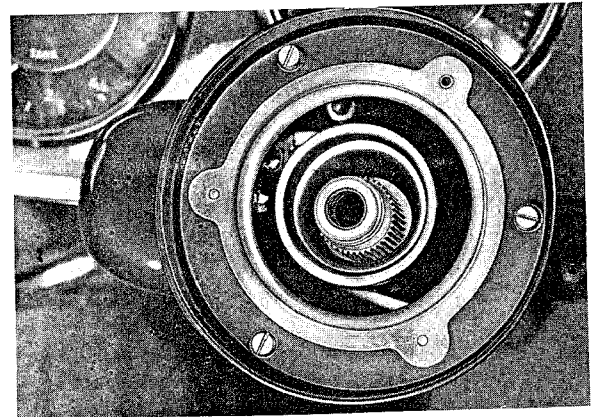


Fig. 61