

## Installation

The installation is accomplished in the reverse order of removal observing the following points:

1. Roll down the elevating mechanism as flat as possible so that it will fit through the opening in the door.

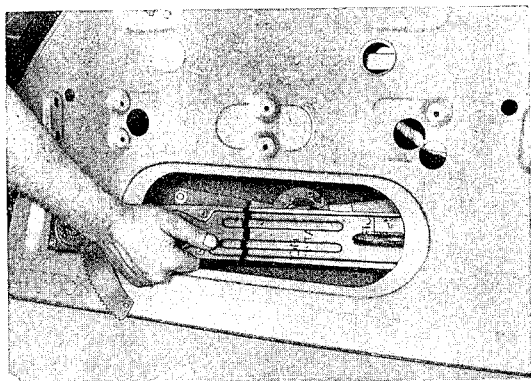


Fig. 47

2. Loosely fasten the elevating mechanism to the door so that it can be adjusted to fit the window.

3. Disconnect the window rails from the bottom of the door frame so that the window may be adjusted to fit the elevating mechanism and install the window.

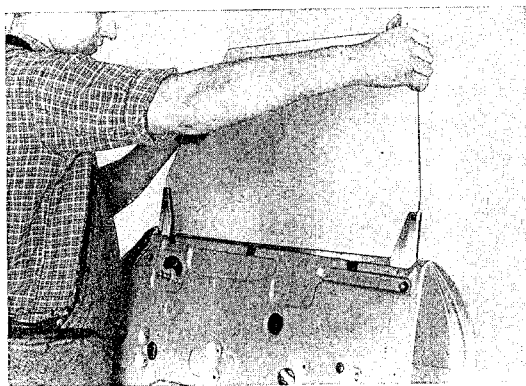


Fig. 48

4. Engage the rollers of the elevating arm in the elevating track of the window. Tighten the elevating mechanism mounts when the correct position is obtained.

5. Fasten the window rails to the bottom of the door frame.

6. Roll up the window and check whether it is parallel to the windshield post and roof. If not, adjust by re-locating the elevating mechanism.

7. The window must be tilted inward so that it seals against the roof and windshield post when the door is closed. The slope can be adjusted by moving the window rails.

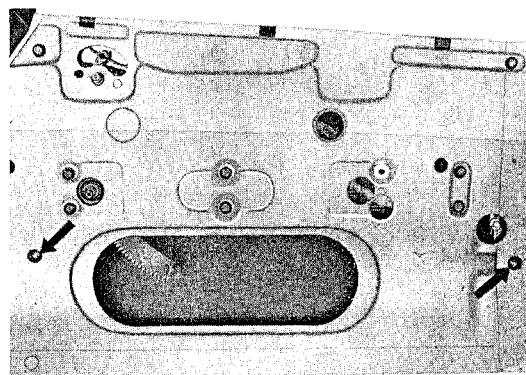


Fig. 49

8. The travel of the window can be adjusted by two limiting stops on the elevating mechanism (see item 8 page R 18).

9. Grease all moving joints of the elevating mechanism.