

5. Install gearshift base and start the three Allen-head screws, do not tighten.

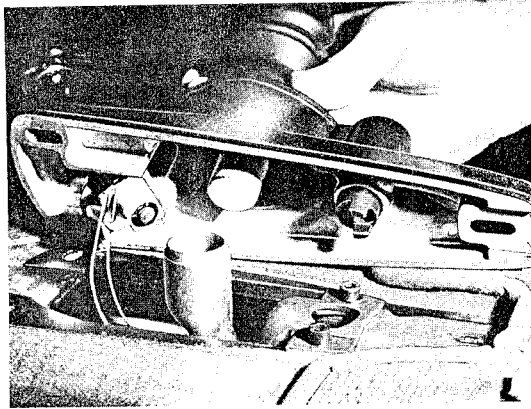


Fig. 21

7. Turn control knob to the lowest position of spindle nut, that is, until it rests against the lock ring.

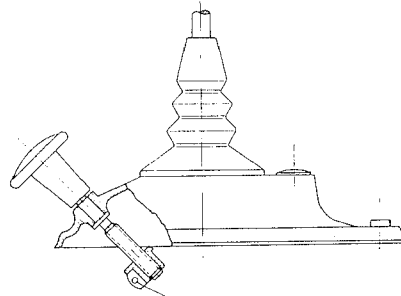


Fig. 23

6. Align gearshift base with markings, tighten screws.

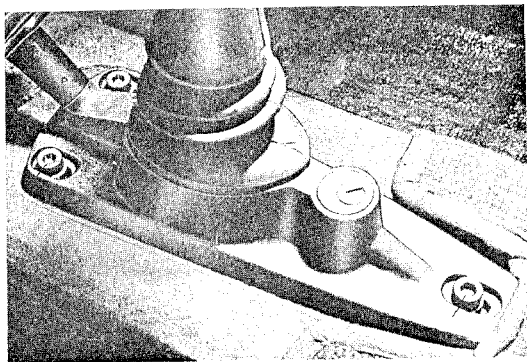


Fig. 22

8. Attach control cable ends to connecting levers at air gate assemblies. Make certain that the heater flaps work in unison, opening and closing fully.