

Replacing Brake Pad Segments

1. Place car on stands and remove wheels.
2. Remove pin retaining clips,

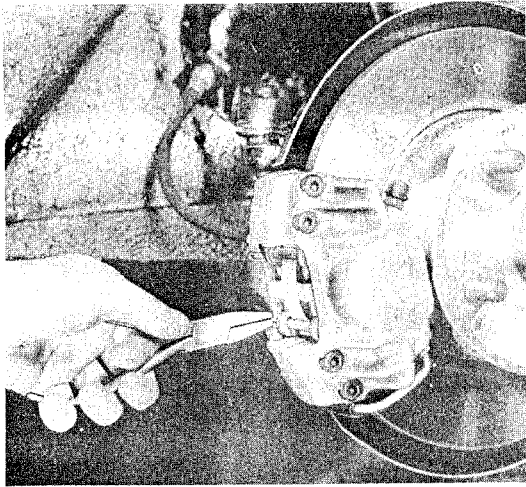


Fig. 8

5. Remove brake pad segments with a hook.

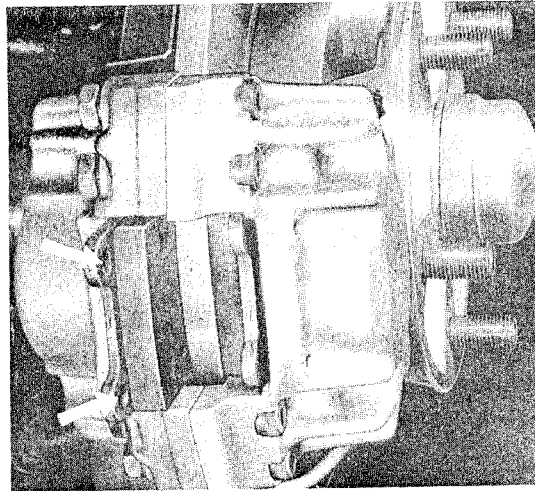


Fig. 10

3. Remove retaining pins (towards center of car) while depressing the cross-spring.

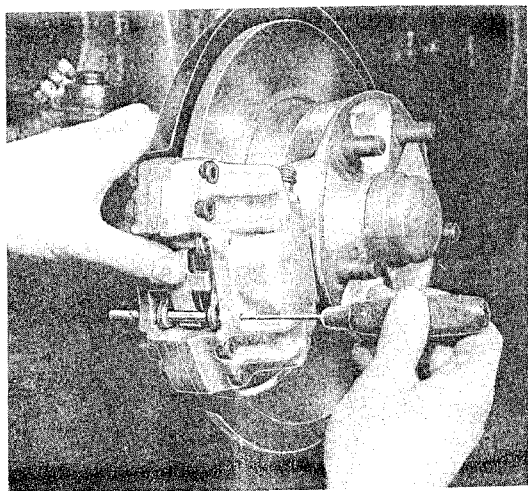


Fig. 9

6. Force pistons fully back by using the piston depressor (P 83); if not available, a piece of hardwood may be used for this purpose. Different tools may not be used due to the possibility of damaging the pistons or brake discs.

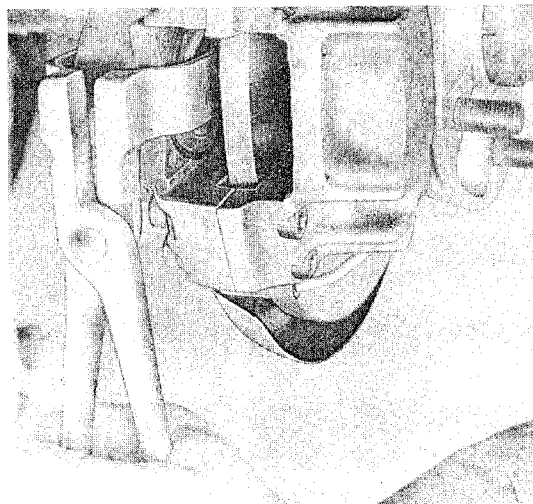


Fig. 11

4. Appropriately mark brake pad segments which may still be used.