



Puller

P 59

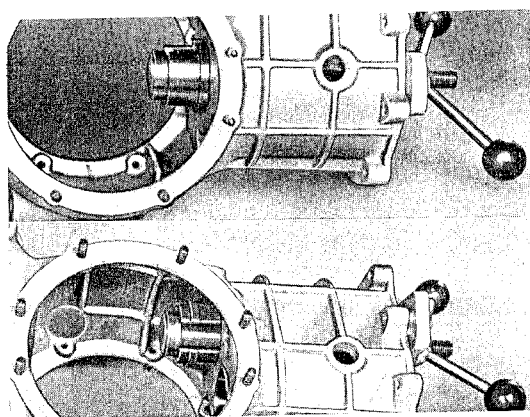

Application

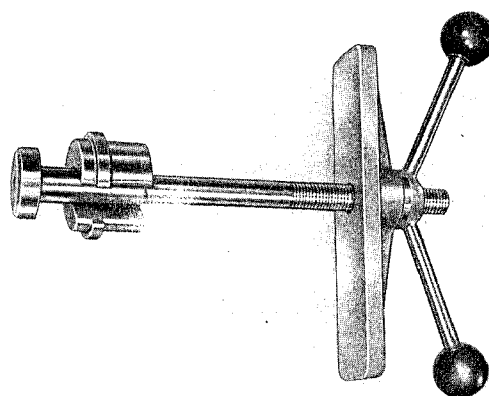

Tool


Use: To remove outer race of main and pinion shafts from transmission housing

See: Workshop Manual, group R, operation 2 RA


Subject to change

Mandrel

P 60

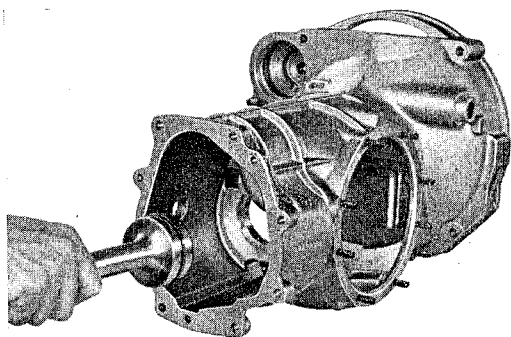

Application

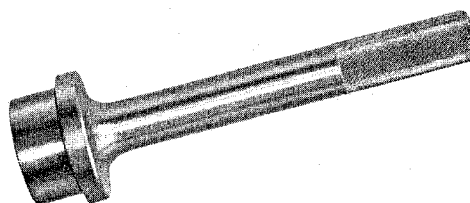

Tool

Use: To install roller bearing race in transmission housing (pinion shaft)

See: Workshop Manual, group R, operation 2 RA

Subject to change