



## Press Stand

P 55

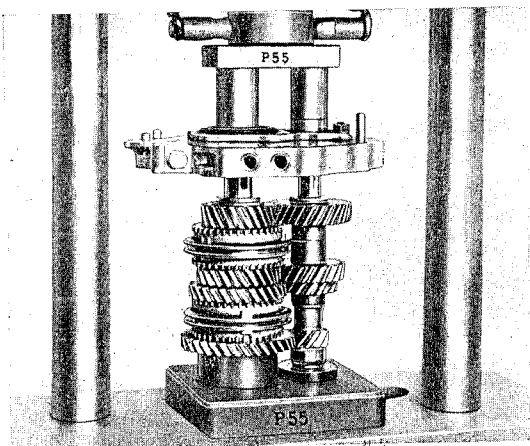

Application

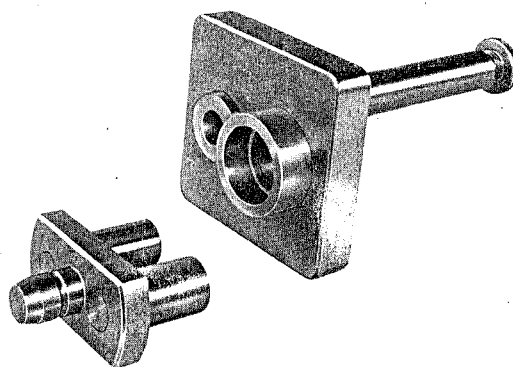

Tool


**Use:** To press intermediate plate onto main and pinion shafts

**See:** Workshop Manual, group R, operation 2 RA


Subject to change

## Press block

P 56

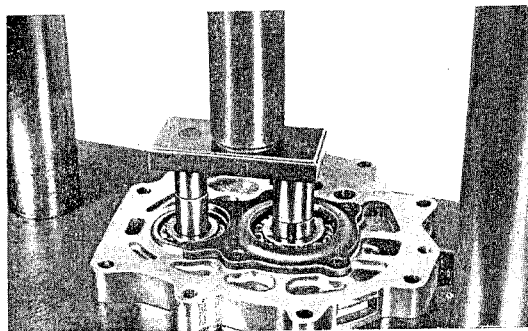

Application

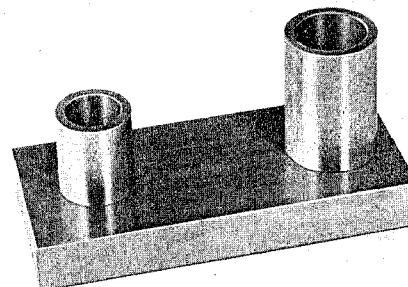

Tool

**Use:** To press main and pinion shafts out of intermediate plate

**See:** Workshop Manual, group R, operation 2 RA

Subject to change