



T-handled socket wrench 24 mm

P 19a

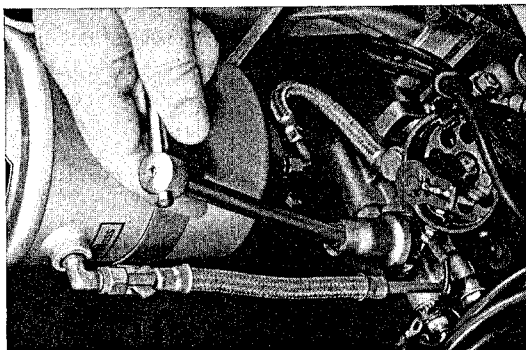

Example of use

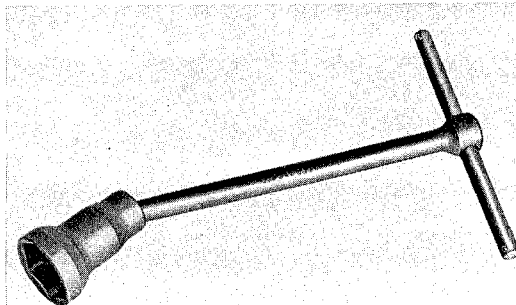

Tool


Use: To remove and install oil pressure indicator switch

See operation 2 EN


Subject to change

Piston ring gap grinder

P 20

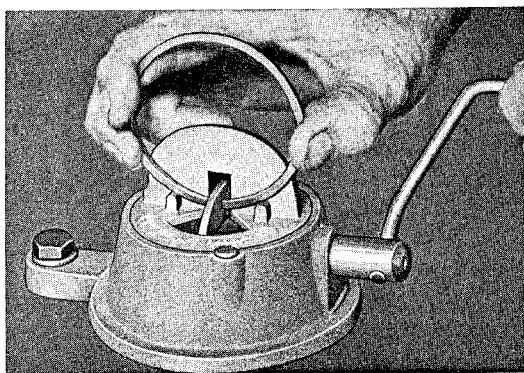

Example of use

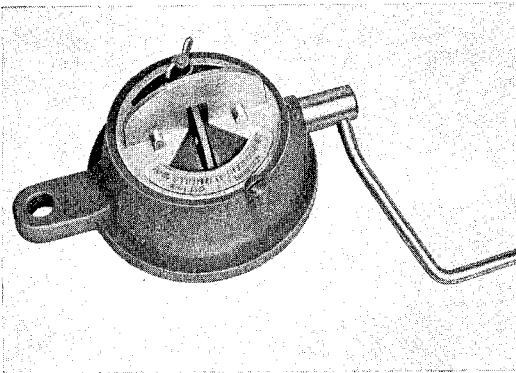

Tool

Use: To adjust piston ring gap

See operation 34 EN

Subject to change