

Replacing Door Contact Switches

The door contact switches for the interior lights are located in the center of the inner hinge plate. The switches are pressure release actuated and operate when the doors are opened. The switch merely supplies the ground for the interior light and therefore has only one wire.

Replacement

1. Pull out switch and disconnect cable.
2. Connect cable to new switch and push switch into place.

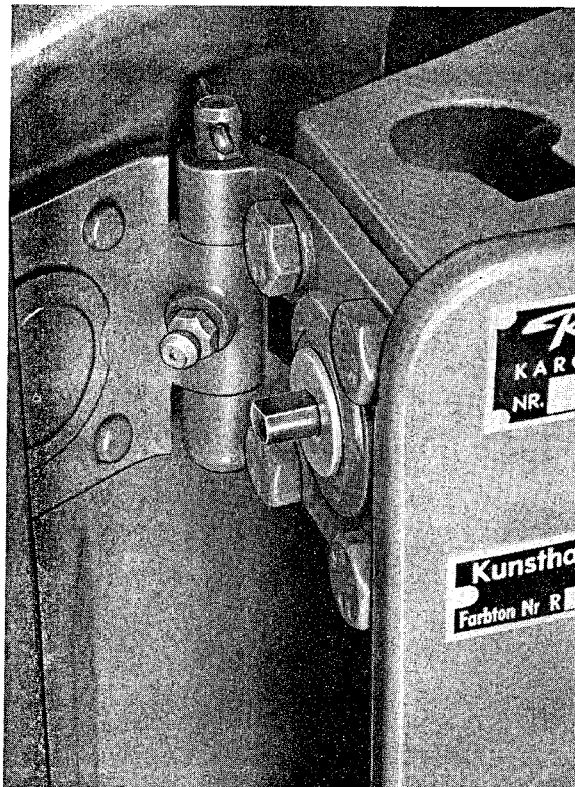


Fig. 68