

Fig. 5

- 1 Relay support
- 2 Relay switch
- 3 Electric fuel pump

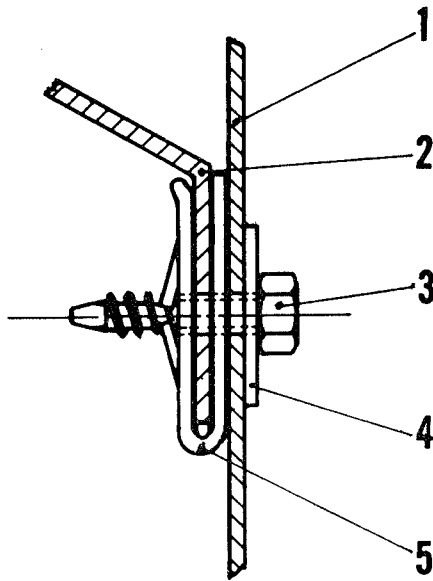


Fig. 6

8. Remove both plastic plugs from the front compartment transverse panel and fasten the angular heater support with both speed nuts; place bolts and washers from outside (see Fig. 6 and 7).

- 1 Front compartment transverse panel
- 2 Heater support
- 3 Tapping screw
- 4 Washer
- 5 Speed nut

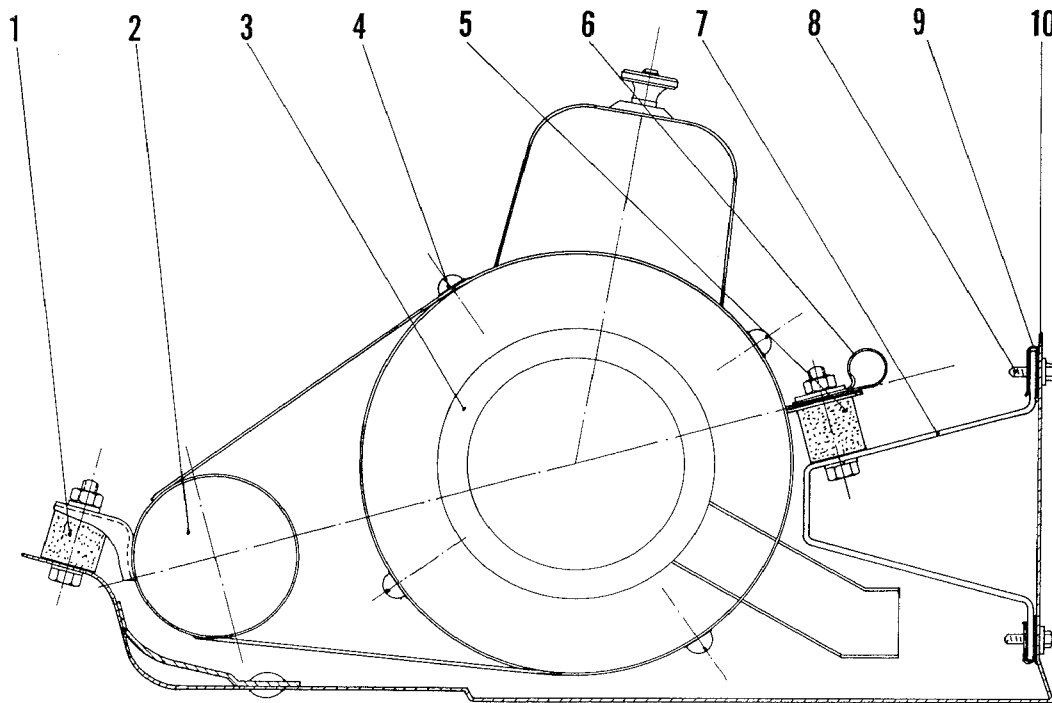


Fig. 7

- 1 Rubber support
- 2 Warm air distributor
- 3 Heater
- 4 Distributor retaining screw
- 5 Rubber support

- 6 Holding clamp
- 7 Heater support
- 8 Tapping screw
- 9 Speed nut
- 10 Front compartment transverse panel