

15. Remove V-belt pulley using puller P 43 and remove cover plate.

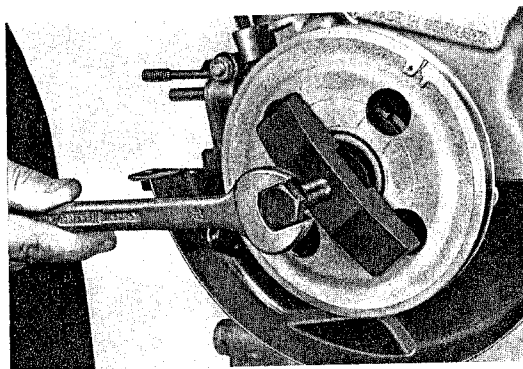


Fig. 72

The installation is carried out in the reverse order making sure that sheet metal joints fit properly and the rubber spark plug caps are correctly installed.

If the rubber weather strip for the front or rear cover plate is unserviceable it must be replaced. Care must be taken to keep all rubber parts free from oil and grease. The correct positions for the deflector plates are:

Deflector plate  
Cyl. III + IV

Deflector plate  
Cyl. I + II

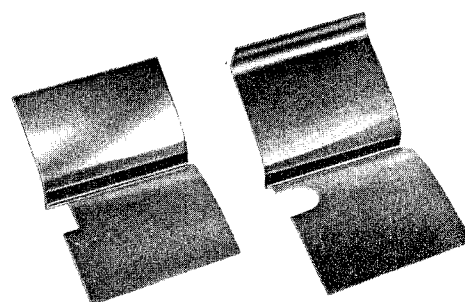


Fig. 73

## Removing and Installing Fan Housing

4 EN

### Removal

1. Disconnect throttle linkage from carburetors.

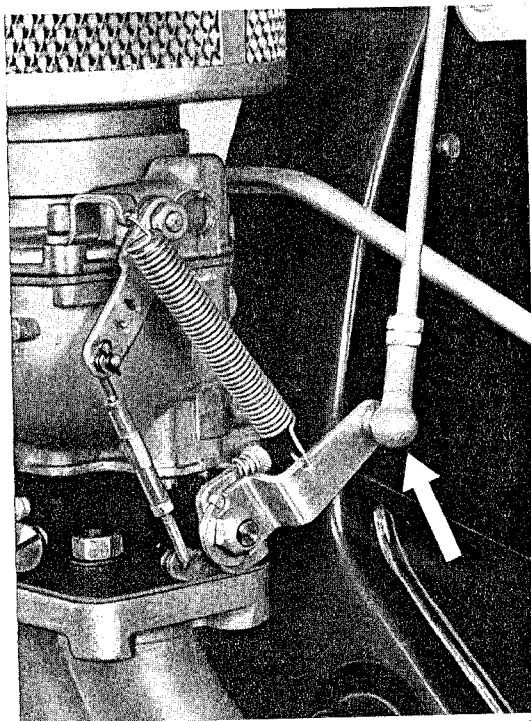


Fig. 74

2. Remove fuel lines and carburetors.
3. Remove oil breather pipe.

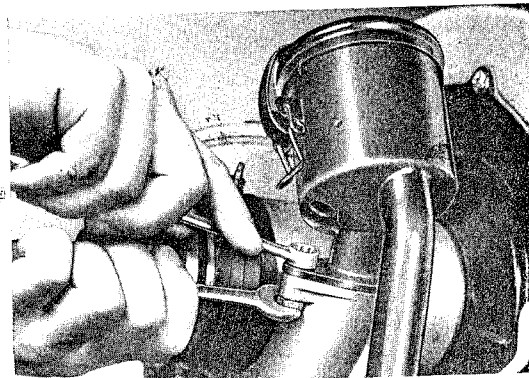


Fig. 75

4. Remove generator clamp.

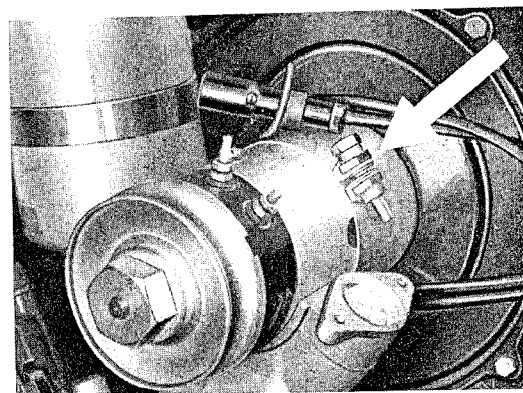


Fig. 76