

### Installation

The installation is accomplished in the reverse order of removal observing the following points:

1. Inspect the rubber buffer pads at the four corners of the hood. Install new buffers where necessary.
2. Lightly fasten the four mounting screws and align the hood on the hinges.
3. Carefully close the hood to check its position with respect to the body. Adjust where necessary.

## 5 B0

### Removing and Installing Hinges for Rear Hood

The hinges of the rear hood are held in place by two M8 screws which can be reached from the engine compartment. The hinge latching device must operate freely so that the ratchet can turn easily.

For function of the latch mechanism see pages B 4 and B 5.

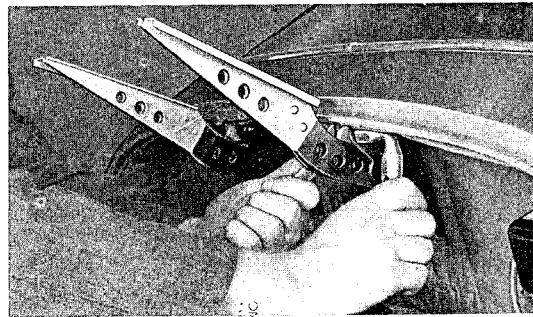


Fig. 15

## 6 B0

### Removing and Installing Rear Hood Lock

#### Removal

1. Open rear hood and latch in raised position.
2. Remove two M6 mounting screws in the hood and remove latch from hood.
3. Remove four M6 mounting screws from the lock assembly and remove the lock.
4. Disconnect release cable.

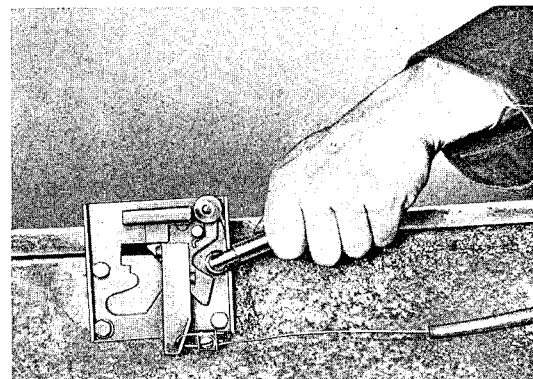


Fig. 16