

2. Push the two ends of the cable into the floor tunnel putting the longer section into the right channel.

3. Install spindle nut on heater control spindle with the cable eye to the front.

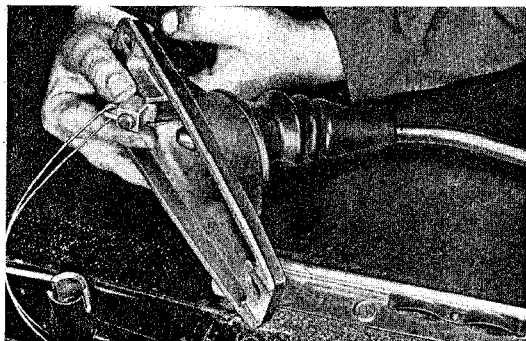


Fig. 96

4. Install lock ring on control spindle.

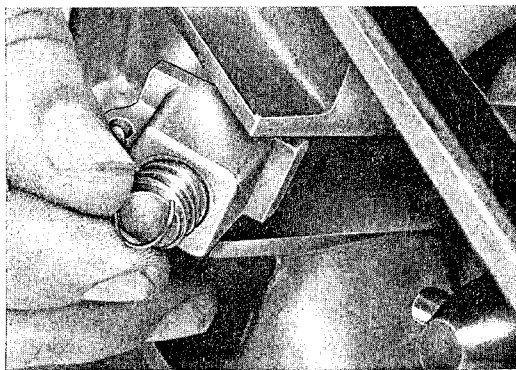


Fig. 97

5. Check that the shift linkage support is centered over the screw threads of the rear gear shift base.

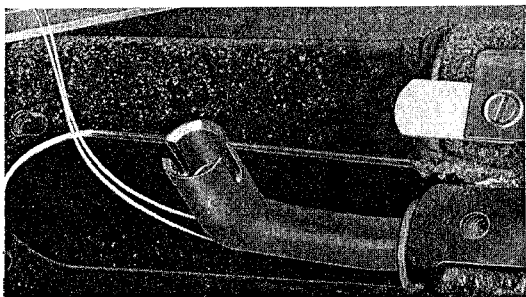


Fig. 98

6. Install gear shift base with three allen screws.

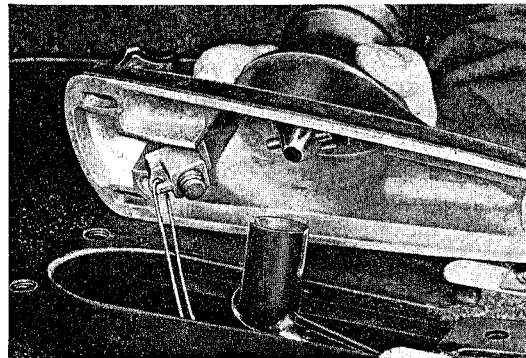


Fig. 99

7. Adjust gear shift base to previously inscribed marks and secure.

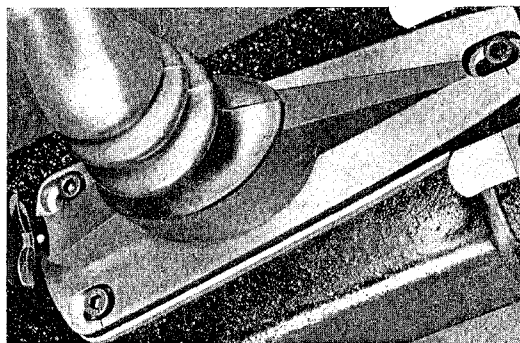


Fig. 100

8. Unwind the heater control knob to the stop.

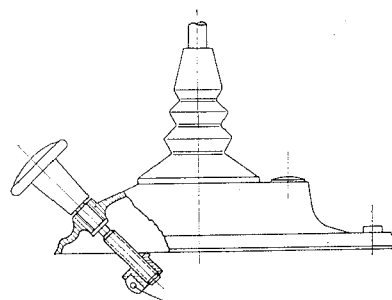


Fig. 101

9. Connect the ends of the control cable to the heater flap levers.