

6. Remove anti-roll bar (18 St)
7. Remove suspension arm (10 St)
8. Remove torsion bars (12 St)

Assembly

The front axle is assembled in reverse order, attention being paid to the instructions given in the following chapters.

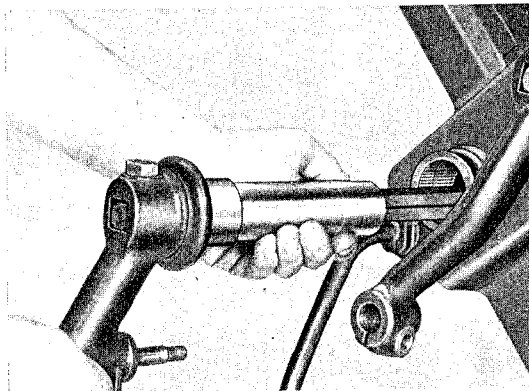


Fig. 8

2 ST

Removal and Installation of Front Wheel Brake Drum

Special tools:

- P 30 Brake drum puller
- P 63 Puller for annular tapered bearing

Removal

1. Take off wheel hub cap
2. Loosen wheel nuts
3. Jack up car
4. Take off wheel nuts and wheel
5. Remove speedometer drive shaft cotter pin on left front wheel.
7. Loosen cyl. screw in clamping nut and remove nut (right-hand thread on left and right stub axle).
Loosening and tightening of cyl. screw is done with a commercial 6 mm hex. socket wrench.

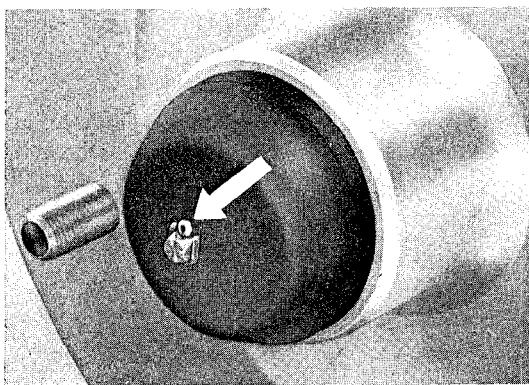


Fig. 9

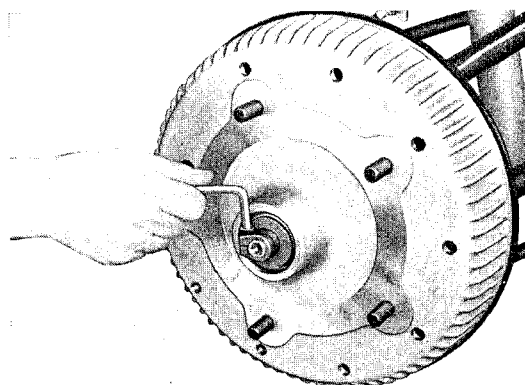


Fig. 10

6. Take off axle cover
8. Take out thrust washer