

8. Remove brake drums using puller P 30.
9. Remove brake shoes, springs, and push rod (8 TI).
10. Remove brake line on brake cylinder and cover with bleeder cap.

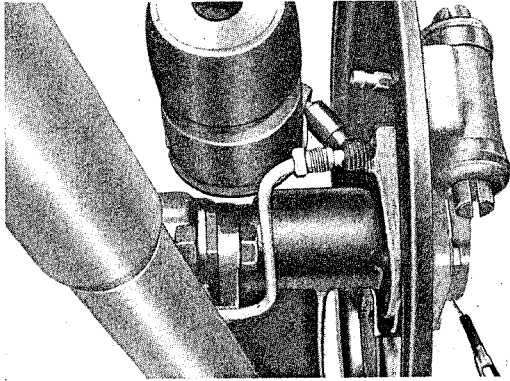


Fig. 21

11. Remove brake hose clamp on axle tube.
12. Loosen bracket for hand brake cable and remove hand brake cable.

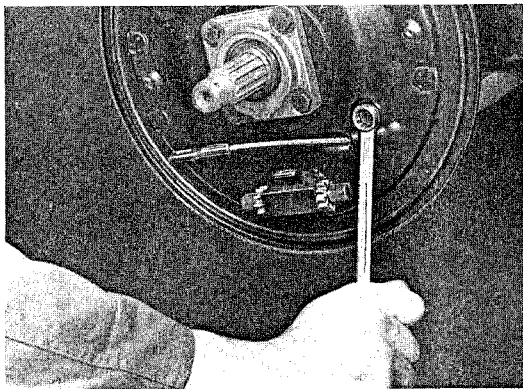


Fig. 22

13. Remove bolts from rear wheel bearing cap. Caution! Transmission oil will run out.

Remove brake backing plate and replace bearing cap and spacer temporarily.

14. Lift radius arms with tool P 53 and remove shock absorbers.

15. Remove mounting bolts from axle tube suspension flange. The front bolt is an adjustable stop and should not be disturbed. Remove angle bracket and rubber buffer.

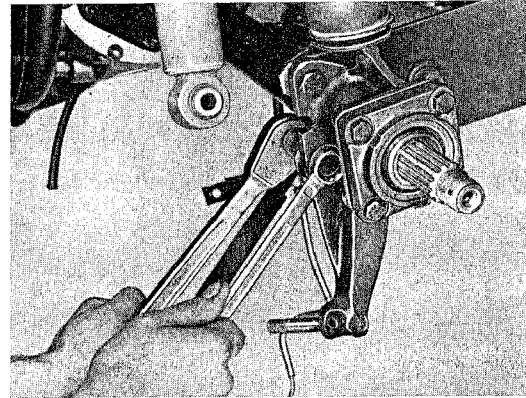


Fig. 23

16. Remove nuts from front transmission mount.

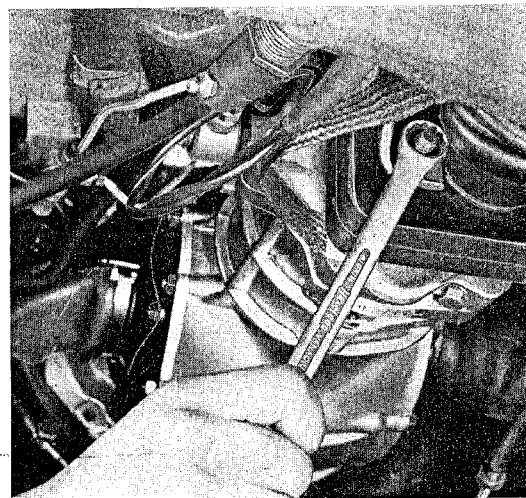


Fig. 24

17. Remove ground strap.

18. Disconnect throttle linkage.