

19. Remove torque rod.

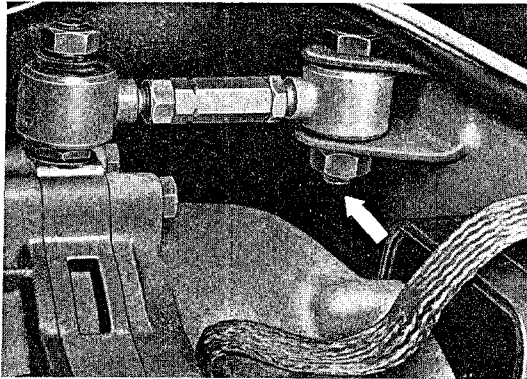


Fig. 25

20. Disconnect starter cable. Remove plug for back-up light switch.

21. Remove clevis from clutch release lever by removing clevis pin.

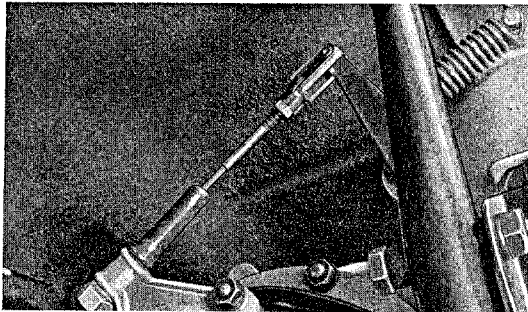


Fig. 26

22. Remove both cover plates from transmission mount bolts. Remove mounting bolts, then remove rear axle and transmission.

If the cable bracket is not slotted, the clevis end of the clutch cable must be unscrewed so that the cable can be pulled through the cable bracket.

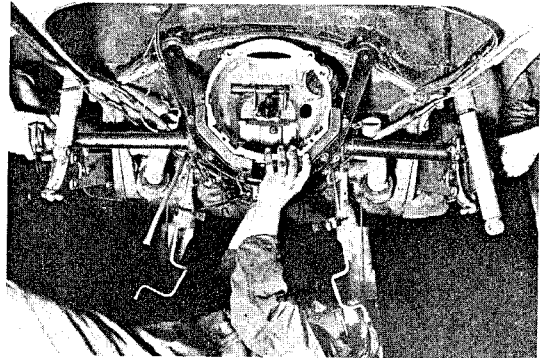


Fig. 27

23. Remove starter.

24. Remove shift rod connector and bellows from selector shaft.

Removed Rear Axle with Transmission

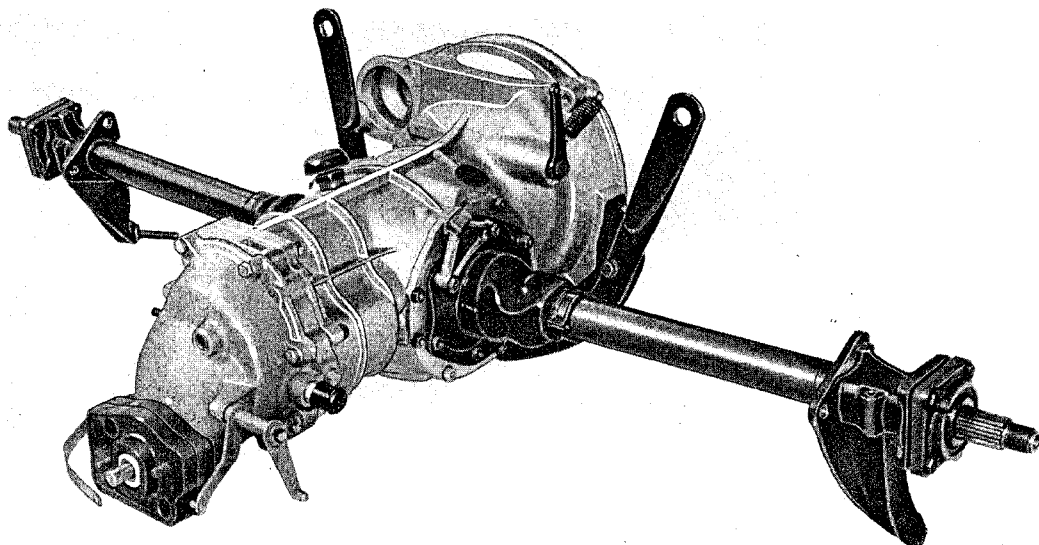


Fig. 28